

Quick Start Guide

(8200-1630-07_B0)

Pro Gen 3 Mini Dome Recess Mount Installation Guide

The IPSMDFLUSHOW3 recess mount is used to mount the Pro Gen 3 2MP, 3MP, 5MP and 8MP Dome cameras to a wall or ceiling.

This guide explains how to assemble and install this mounting structure.

Parts Supplied

| Parts Supplied | Quantity |
|-----------------------|----------|
| Ceiling Mount Bracket | 1 |
| Ceiling Plate | 1 |
| M4*8mm | 4 |
| Mounting Template | 1 |
| Quick Start Guide | 1 |

Recess mount installation with a ceiling plate

- A. Place the 'Guide' sticker provided on the ceiling plate and cut a 198mm (7.8inch) hole, then insert the recess mount bracket into the ceiling plate hole. (Fig 1).

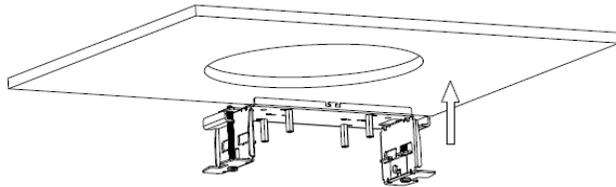


Figure 1

- B. Use a screw driver to turn the two bracket screws (1) clockwise to extend the locking arms (2) and tighten securely to compress the locking arms so that the ceiling mount can be fixed within the in-ceiling area firmly.

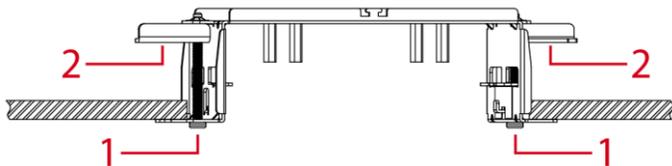


Figure 2

- C. Securely attach the camera base (1) to the recess mount with the four M4*8mm screws.

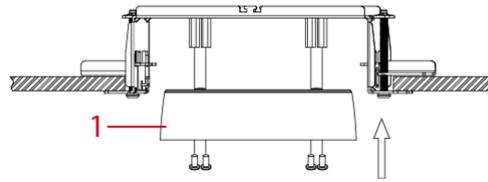


Figure 3

- D. Remove the required grommets from the mounting base, fit the grommets to the cable(s) and then refit into the mounting base.
E. Connect the required cables (24VAC, RJ45, etc.) to the camera.
F. Securely attach the camera to the camera base with the three M3x16mm (Torx T10) screws located on the camera (1) (Fig. 4).

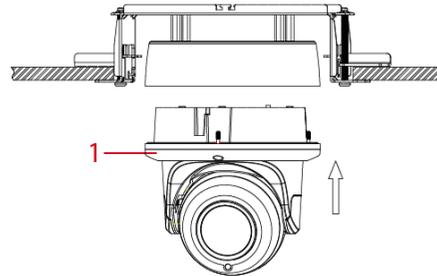


Figure 4

- G. Remove the side cover (1) (Fig. 5), and loosen the screw (2) (Fig. 5) to adjust the lens tilt.

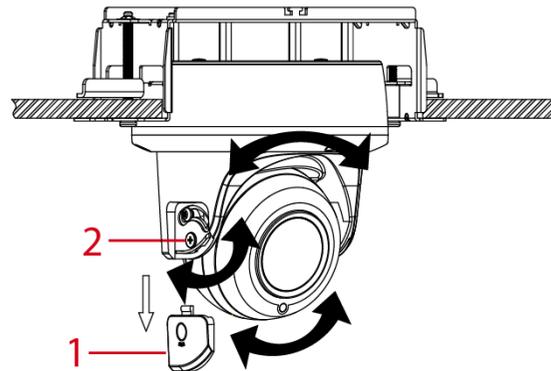


Figure 5

- H. Once the lens is positioned, retighten the screw (2) (Fig.5) and the three screws on the camera (1) (Fig. 4).
I. Place the ceiling cover (1) (Fig. 6) around the Dome camera and insert it into the recess mount (Fig.6).
Note: Ensure that the two clips (2) (Fig 6) are inserted correctly into the recess mount.

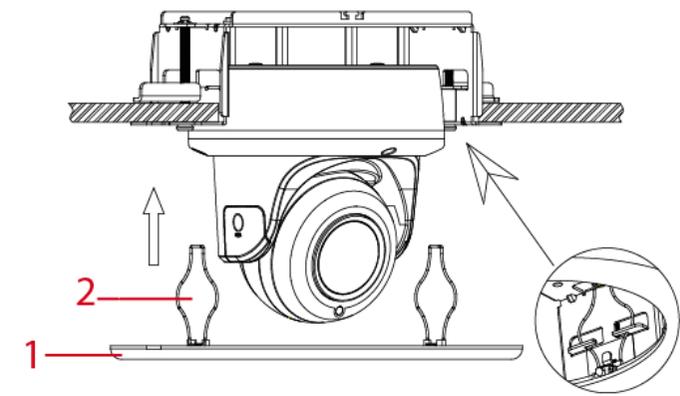


Figure 6

Figure 7 - Completed Installation

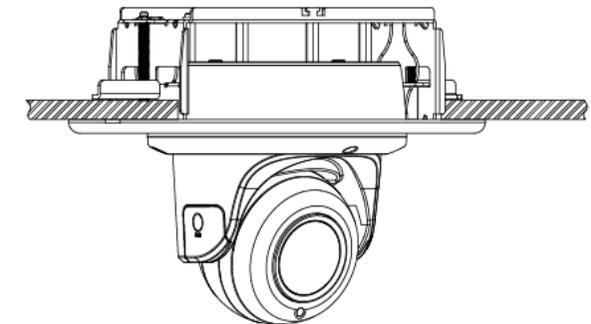


Figure 7