

P6/P7/Z6/Z7/V1 Series IP Camera User Manual

Table of Contents

Summary	3
Key Features	3
Trademarks & Acknowledgments	3
Other References	4
LILIN Universal ActiveX Control	4
LILIN HTTP API	4
Disclaimer	4
Caution	4
Chapter 1 System Overview	5
Chapter 1-1 System Requirements	5
Chapter 1-2 Software Requirements	5
Chapter 1-2-1 Apple Mac OS	5
Chapter 1-2-2 PC Windows OS	5
Chapter 2 Before Accessing IP Cameras	6
Chapter 2-1 Configure IP Addresses using the IPScan Utility	6
Chapter 2-2 Configure IP Addresses through HTML Connection	6
Chapter 2-3 Web Browser Settings & Software Components Required	7
Chapter 2-4 Login	7
Chapter 3 LILIN IP Camera Operations	8
Chapter 3-1 HTML Operations	8
Chapter 3-2 Quick Buttons	8
Chapter 4 Settings	9
Chapter 4-1 System	9
Chapter 4-1-1 General	9
Chapter 4-1-2 User	10
Chapter 4-1-3 Timer Settings	10
Chapter 4-1-4 OSD Settings	11
Chapter 4-1-5 System Log	11
Chapter 4-2 Video	11
Chapter 4-2-1 General	12
Chapter 4-2-2 Quality Basic	13
Chapter 4-2-2-1 Thermal Imaging Quality Basic	13
Chapter 4-2-3 Quality Advance	14
Chapter 4-2-3-1 Sense Up+	16
Chapter 4-2-3-2 White Balance Control (AWB)	16
Chapter 4-2-3-3 P-Iris Mode	16
Chapter 4-2-3-4 Thermal Imaging Quality Advance	17
Chapter 4-2-4 Auto Focus	18
Chapter 4-2-5 Day Night Mode Switch	18
Chapter 4-2-6 Privacy Mask	19
Chapter 4-2-7 Audio Adjust	19
Chapter 4-2-8 ROI	20
Chapter 4-2-9 Thermal Imaging Fusion	20
Chapter 4-3 Controls	21
Chapter 4-3-1 Digital I/O	21
Chapter 4-3-2 Global Counter	21
Chapter 4-3-3 Virtual Input	22
Chapter 4-3-4 Metadata	22
Chapter 4-4 Network	23
Chapter 4-4-1 General	24
Chapter 4-4-2 HTTP Service	24
Chapter 4-4-3 RTSP	25

Chapter 4-4-4 HTTPs Service	25
Chapter 4-4-5 IP/MAC Address Filtering	27
Chapter 4-4-6 DDNS	27
Chapter 4-4-7 Push Service	27
Chapter 4-4-8 LTE	28
Chapter 4-5-1 SmartEvent	28
Chapter 4-5-2 Motion Detection	30
Chapter 4-5-3 Tampering Detection	30
Chapter 4-5-4 Audio Detection	31
Chapter 4-6 Notification	31
Chapter 4-6-1 FTP Service	31
Chapter 4-6-2 SMTP (Email) Service	32
Chapter 4-6-3 HTTP POST Service	32
Chapter 4-6-4 SD Card Service	33
Chapter 4-6-5 SD Card Backup File	33
Chapter 4-6-6 Samba Service	33
Chapter 4-7 Maintenance	34
Chapter 4-7-1 Firmware Update	34
Chapter 4-7-2 P2P	35
Chapter 4-8 LPKG	35
Appendix	37
DDNS Network Settings	37
Advanced Port Forwarding Technology	37
Restore to Factory Default	37



Summary

LILIN P6/P7, Z6/Z7 and V1 series Aida cameras include a series of 4K and 5 MP resolution IP cameras, day and night high-quality auto-focus network cameras. This camera adopts the latest Smart H.265 image compression technology, and the network transmission of ultra-high resolution images is smoother. LILIN's multi-streaming technology can provide 4K, 2 million, 720p, D1, CIF and other resolutions, which can be adapted to transmit high-quality images under various bandwidth network environments.

Ultra-low light sensor, color night light enhanced mode, 4K picture is more realistic. Ultra-wide dynamic HDR technology, up to 120dB in high backlight environment, the face image is clearer.

The P6/P7, Z6/Z7 and V1 series of Aida cameras have built-in AI recognition GPUs and provide external AI plug-ins for multi-species analysis, which can effectively avoid false alarms. The P6/P7, Z6/Z7 and V1 series IP cameras support SmartEvent technology, which provides programmable and scheduled alarm DO triggering, counters and virtual digital inputs to provide network system integration. Lilin cameras provide output functions for sending alarm information, including smartphone connections, email snapshots, and FTP snapshots.

In addition, The P6/P7 and Z6/Z7 series cameras can connect to Navigator VMS software. This software can enhance the performance of the network camera and provide you with a complete video management solution.

Key Features

- Supports Smart H.264 and H.265 encoding formats.
- Built-in GPU engine for Aida plug-in
- AI detection can send Email or FTP snapshot alarms
- SmartEvent for digital output
- Ultra low light & HDR at 120dB
- Day/night video quality independent scheduling
- Bit rate and frame rate on-the-fly adjustment
- Support dynamic DNS (DDNS) and network time protocol (NTP)
- Support HTTP API integration
- Support ONVIF protocol
- Support LILIN Navigator

Trademarks & Acknowledgments

Windows 7, ActiveX, and Internet Explorer are registered trademarks of Microsoft Corporation in the U.S. and/or other countries. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries. Flash, Macromedia, and Macromedia Flash Player are either trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries. Linux and DynDNS are registered trademarks of the respective holders. Intel, Pentium, and Intel® Core™ 2 Duo are registered trademarks of Intel Corporation. FFmpeg is a trademark of [Fabrice Bellard](#), originator of the FFmpeg project. QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Computer, Inc., used under license there from. Other names of companies and their products mentioned in this manual may be trademarks or registered trademarks of their respective owners.

This product contains H.265 (High Efficiency Video Coding, HEVC) codec technologies and is manufactured under the license from Access Advance LLC, and the HEVCAdvance symbol are trademarks of Access Advance LLC.



Covered by one or more claims of the HEVC patents listed at patentlist.accessadvance.com.



Other References

LILIN Universal ActiveX Control

Sample codes and documents are included in the product CD and can be downloaded from our company website.

LILIN HTTP API

For non-ONVIF integration, see the LILIN HTTP API document. HTTP API is used in all LILIN IP cameras.

Disclaimer

Please be aware that this user manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable or available to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Caution

- Do not drop or damage the equipment
- Do not install the equipment near fire or heat sources
- Keep the equipment from rain, moisture, smoke, or dust
- Do not cover the opening of the cabinet with cloth and/or plastic or install the unit in poorly ventilated places. Allow 10cm between this unit and its surroundings
- Do not continue to operate the unit under abnormal conditions such as smoke, odor, or loss of signal whilst power is turned on
- Do not touch the power cord with wet hands
- Do not damage the power cord or leave it under pressure
- To avoid unnecessary magnetic interference, do not operate this unit near magnets, speaker systems, etc.
- All connection cables should be grounded properly





Chapter 1 System Overview


Chapter 1-1 System Requirements

LILIN's IP camera uses compression technology that provides high compression rate and superior video quality. However, video performance depends highly on CPU power and network bandwidth for video streaming. The following sections specify the system requirements for using LILIN IP cameras.

Chapter 1-2 Software Requirements

Chapter 1-2-1 Apple Mac OS

LILIN IP camera uses HTML5 streaming which supports Safari browser for accessing video streaming of the IP camera on Apple Mac OS without any software plug-in.

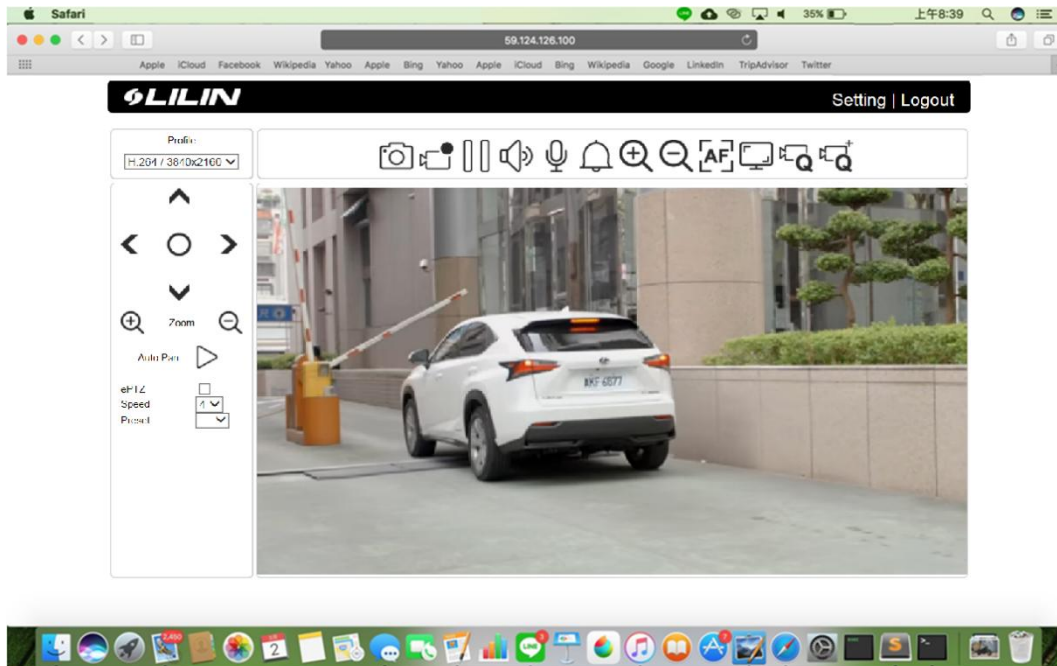

Chapter 1-2-2 PC Windows OS

Merit LILIN Universal ActiveX software components for a web browser to display MJPEG or H.264/H.265 video. When you first log in to our IP camera, you may see a prompt box as below via Windows OS.




Chapter 2 Before Accessing IP Cameras

Before accessing the IP cameras, make sure that the camera's RJ-45 network connector, audio cable, and power cable are properly connected. To set the IP address, consult your network administrator. The default IP address for each IP camera is 192.168.0.200. Users can use the default IP address to verify the camera's network connection.

Chapter 2-1 Configure IP Addresses using the IPScan Utility

To configure the IP address of your cameras, download [IPScan](#) from our official website. Or, you can execute the IPScan installer from the installation CD directly. To change the IP address, subnet mask, gateway, or HTTP port of your cameras, follow the steps below:

- Run the IPScan utility
- Click Refresh. All available devices will be listed on the screen
- Select the device item from the device list
- To edit or modify IP address, subnet mask, gateway, or HTTP port, use the box
- Click Apply for the changes to take effect
- Click Refresh again to verify the changed settings

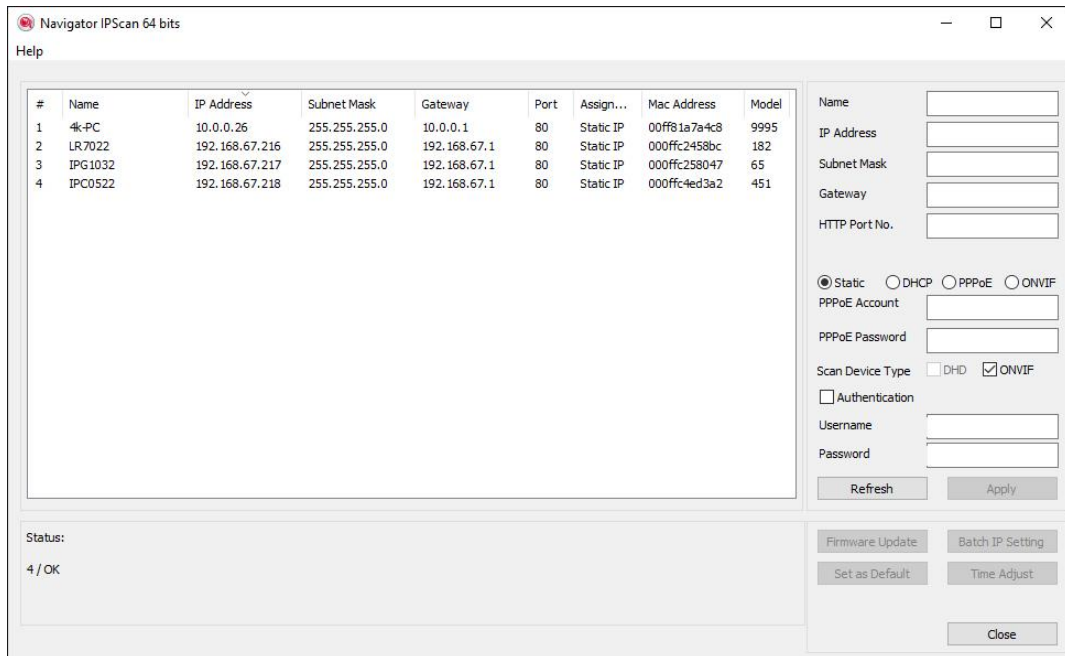

#	Name	IP Address	Subnet Mask	Gateway	Port	Assign...	Mac Address	Model
1	4K-PC	10.0.0.26	255.255.255.0	10.0.0.1	80	Static IP	00ff81a7a4c8	9995
2	LR7022	192.168.67.216	255.255.255.0	192.168.67.1	80	Static IP	000ffc2458bc	182
3	IPG1032	192.168.67.217	255.255.255.0	192.168.67.1	80	Static IP	000ffc258047	65
4	IPC0522	192.168.67.218	255.255.255.0	192.168.67.1	80	Static IP	000ffc4ed3a2	451

Configuration options on the right:

- Name:
- IP Address:
- Subnet Mask:
- Gateway:
- HTTP Port No.:
- Static (selected), DHCP, PPPoE, ONVIF
- PPPoE Account:
- PPPoE Password:
- Scan Device Type: ☐ DHD, ☒ ONVIF
- Authentication: ☐
- Username:
- Password:
- Buttons: Refresh, Apply, Firmware Update, Batch IP Setting, Set as Default, Time Adjust, Close

Status: 4 / OK


Chapter 2-2 Configure IP Addresses through HTML Connection

To change an IP address on a webpage, type the default IP address (192.168.0.200) into the browser address bar and follow the steps below:

- Due to security reason, create the username and password for the first login. To login to the IP camera, please create the username and password on the login page. Press **Confirm** to complete the setting and login simultaneously.
- Click **Setup**→**Network** to edit or modify IP address, subnet mask, gateway, or HTTP port
- Click **Submit** for the changes to take effect.

Chapter 2-3 Web Browser Settings & Software Components Required


Make sure your Internet browser allows signed ActiveX plug-in to run on your PC. Set Download Signed ActiveX plug-in controls to Prompt and enable Run ActiveX control and plug-in. You can set this in Internet Explorer→Tools→Internet Options→Security→Custom Settings.

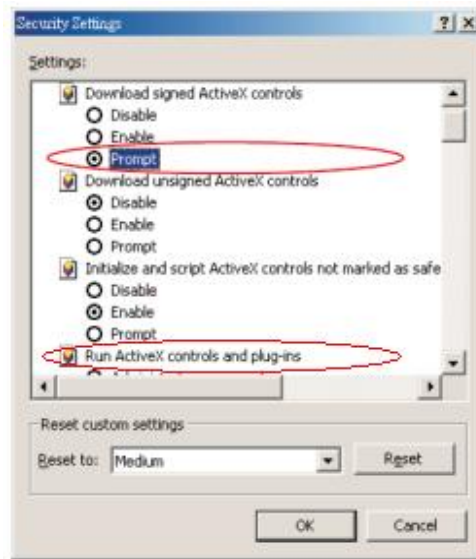

Once completed, you can access the IP camera's live video by entering the default IP address via a web browser. A security warning dialog box will appear. Click OK to download the ActiveX directly from the IP camera.

Chapter 2-4 Login

Due to security reason, create the username and password for the first login. To login to the IP camera, please create the username and password on the login page. Press **Confirm** to complete the setting and login simultaneously.

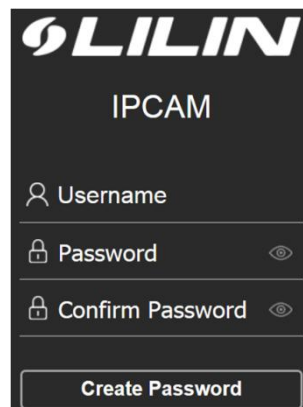

Minimum Password Strength Requirements:


1. The password length must be 8 or more characters.
2. The password must include at least 1 number (0 ~ 9), 1 uppercase letter, 1 lowercase letter and 1 symbol(~ ? / + = , : ; . ' @ # ¥ % ^ & * () _ -).

Note: Please preserve the credential for accessing the camera properly. Forgetting the credential for accessing the camera, please perform hardware factory default.

Chapter 3 LILIN IP Camera Operations

When logged in as an administrator, two main features are available: 1) camera operations and 2) configurations.

Chapter 3-1 HTML Operations

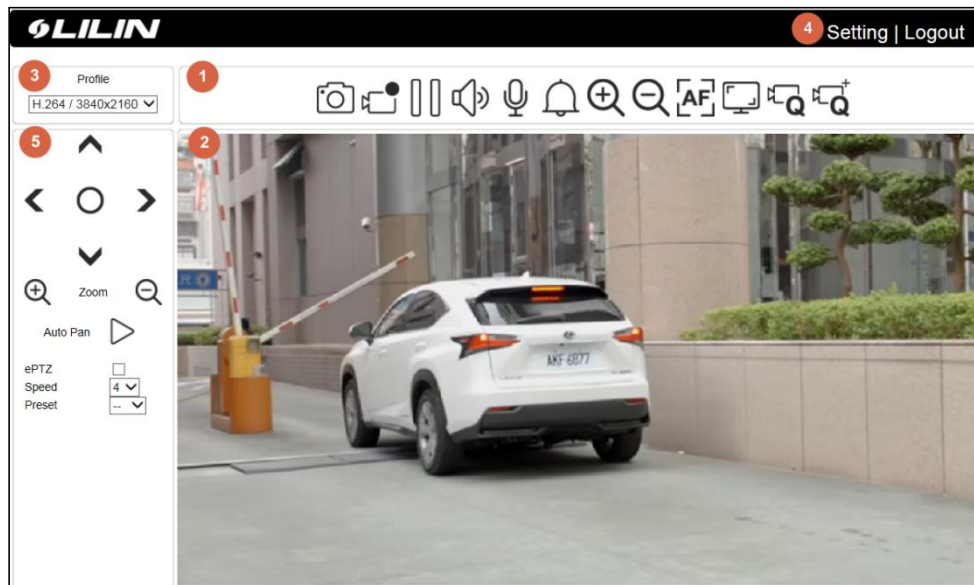

1. **Quick buttons:** IP camera shortcuts
2. **ActiveX display screen:** Display RTSP H.264 or MJPEG streaming video
3. **Profile switching menu:** Switching from one profile to another
4. **Setup buttons:** IP camera setup menu
5. **ROI Control Panel:** The control for digital zoom via ROI.

Chapter 3-2 Quick Buttons

The quick control panel buttons are described below:

	Take a snapshot of the video
	Start recording
	Pause recording
	Speaker output control
	Microphone input control
	Alarm out
	Camera zoom in
	Camera zoom out
	Camera auto focus
	Enlarge the live view
	Video quality basic
	Video quality advance




Chapter 4 Settings

As an administrator, you can configure the IP camera via a standard HTML webpage. Click Setup at the top-right corner of the screen after you log in to the camera.



Chapter 4-1 System



Chapter 4-1-1 General

Under System Settings→General, you will see server system information, such as MAC address, firmware version, os version, system reboot time, and device name settings. To modify these options, follow the instructions below:

Setup > System > General

MAC Address	00:0f:fc:23:65:48
Firmware Version	13.0.001.3321
OS Version	Linux 4.9.84
System Reboot Time	2022/01/11 14:05:19 Tue CST
Device Name	P6R3782E2

OK

- **MAC Address:** The MAC address of the IP camera
- **Firmware Version:** Firmware version of the IP camera
- **OS Version:** The version number of the IP camera
- **System Reboot Time:** The last time your system was rebooted.
- **Device Name:** The device name can be found using the IPscan utility, which allows you to identify the IP cameras. To change the device name, enter a new name for the IP camera and click OK.

Chapter 4-1-2 User

The IP camera supports up to 10 user accounts. Each account can be individually configured for its access rights. To add/edit a user, click Add/Edit User. To access an IP camera without authentication, switch the Bypass Logon option to On. Enable IPScan Bypass Logon to log in the IP camera through IPScan without authentication. To add a user, press Add User, and you will see the following screen:

Setup > System > User

Bypass Logon ☐ OFF

IPScan Bypass Logon ☒ ON

Password Strength ☐ OFF

Authentication Security ☐ OFF Within: 30 Min. Failed Login Attempts: 5 IP Block Length: 5 Min.

Operation Timeout ☒ ON 10 Min.

Account

New Password

Confirm Password

User Group ☒ Administrator ☐ Operator ☐ Viewer

OK Cancel

Password has to meet the following criteria:
 (1) More than or equal to 8 characters,
 (2) Allow uppercase letter, lowercase letter, number digit, and special character,
 (3) Must have at least three types of character sets.

Enter the account name, password and confirm password to add new account, and then check to assign the access rights for this account. Click OK to update the settings.

To edit account information, select user for edit and click Edit User. To delete a user, select user for delete and click Remove User. Click Submit to update the settings.

Chapter 4-1-3 Timer Settings

You can change the time of your camera through a HTML web page. Simply select the date and time in the drop-down menus, and click OK to apply. You may also set the holiday list in this page.

Setup > System > Timer

Server Time 2022/01/11 14:42:59 GMT+0800

Synchronize with NTP ☐ Every Hour ☒ Off

Time Server time.stdtime.gov.tw

Time Zone (GMT+08:00) Taipei

Time 2022/1/11 14:42:51 Synchronize with PC

Enable Holiday List ☒

Select	Name	Start Date(Month-Date Hour:Min)	End Date(Month-Date Hour:Min)
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	
☐		1 - 1 0 0 12 - 31 23 59	

OK

Synchronize with an NTP server

To synchronize with an NTP server, change the Synchronize with NTP to Every Hour. The camera will synchronize its system time with a time server every hour.

Note: This function requires Internet connection.

Chapter 4-1-4 OSD Settings

OSD (on screen display) is for the use of displaying system information on the video. There are features of date and status available.

Setup > System > OSD

time font

status

Rollback Default Position

Camera Date Status

OSD ☒ Enable ☐ Disable

Foreground Color WHITE

Background Color RED

Camera ID, Date and Status are described below:

- OSD: Click to enable or disable the OSD
- Foreground Color: The color of the text
- Background Color: The background color of the text

Chapter 4-1-5 System Log

You can view the system-generated log in this page. Click Save icon to export the log to a text file. You can also search for log file by selecting the type keyword.

Setup > System > System Log

Page 1 of 4 Type: ALL Displaying 1 to 5 of 19 items			
IP Address	User	Date & Time	Log Description
192.168.3.153	admin	2022/01/11 14:40:06	User Login(SYSTEM MESSAGE)
192.168.3.153	admin	2022/01/11 14:39:45	HTTP User Reject(SYSTEM WRONG)
192.168.3.153	admin	2022/01/11 14:39:36	User Logout(SYSTEM MESSAGE)
192.168.3.153	admin	2022/01/11 14:04:53	Restore Default Settings(SYSTEM MESSAGE)
192.168.3.153	admin	2022/01/11 13:57:08	Updated Video Settings(SYSTEM MESSAGE)

Chapter 4-2 Video

Chapter 4-2-1 General

To transmit video over a low bandwidth network such as the Internet, set the bit rate close to the actual upload bandwidth. The camera encodes frames based on the bit rate setting.

Setup > Video > General

Encoder2 : ☒ Enable ☐ Disable

Encoder3/TV Out : ☐ Disable/(TV Out Enable) ☒ Enable/(TV Out Disable)

Video Standard : ☐ 60Hz ☒ 50Hz

Fixed Bitrate Mode : ☒ Enable ☐ Disable

Image Enhance Mode :

Encoder1

Profile Name :

Resolution :

Output Frame Rate :

GOP (Group of Pictures) :

Stream Mode :

Bit Rate :

RTSP URL : rtsp://192.168.3.206:554/stream0

Encoder3

Profile Name :

Resolution :

Output Frame Rate :

GOP (Group of Pictures) :

Stream Mode :

Bit Rate :

RTSP URL : rtsp://192.168.3.206:554/stream2

Encoder2

Profile Name :

Resolution :

Output Frame Rate :

GOP (Group of Pictures) :

Stream Mode :

Bit Rate :

RTSP URL : rtsp://192.168.3.206:554/stream1

Encoder4

Profile Name :

Resolution :

Output Frame Rate :

Image Quality :


RTSP URL : rtsp://192.168.3.206:554/stream3

OK Load Default

- **Profiles:** 4 customizable profiles
- **Video Standard:** NTSC/PAL setting
- **Image Enhance Mode:** HDR switch
- **Profile Name:** The selection of H.264/H.265 video compression
- **Resolution:** The resolution of the video stream
- **Output Frame Rate:** The frame rate of the video
- **GOP:** The number of I-frames to be displayed in one second
- **Stream Mode:** Variable bit rate, an encoding mode that reduces the use of bandwidth;
CBR: constant bit rate, an encoding mode that consumes more bandwidth
- **Bit rate:** The maximum bit rate available for your network connection
- **RTSP URL:** Allow you to access the video stream via the Real Time Streaming Protocol
- **Image Quality:** The compression rate of the H.264/H.265 stream


Chapter 4-2-2 Quality Basic

This menu allows you to adjust brightness, contrast, contrast, hue, saturation, and sharpness both for the Day Mode and Night Mode. Individual day/night settings ensure the camera to provide optimal video quality.

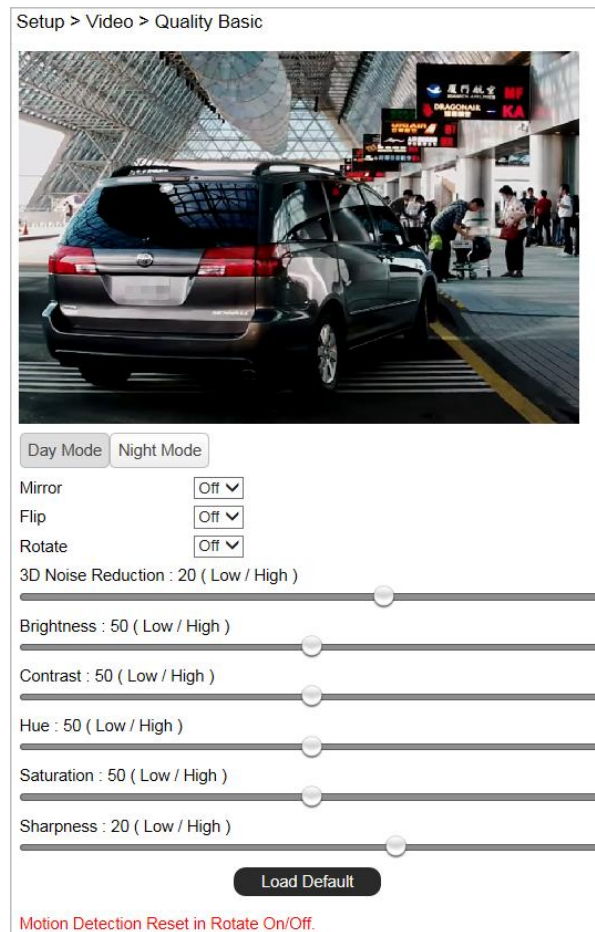

- **Mirror:** Mirror the video
- **Flip:** Flip the video
- **Rotate:** Rotate video to 90 degree for corridor mode.
- **3D Noise Reduction:** If the noise of the video is high at night, set the setting to high if needed.

Chapter 4-2-2-1 Thermal Imaging Quality Basic

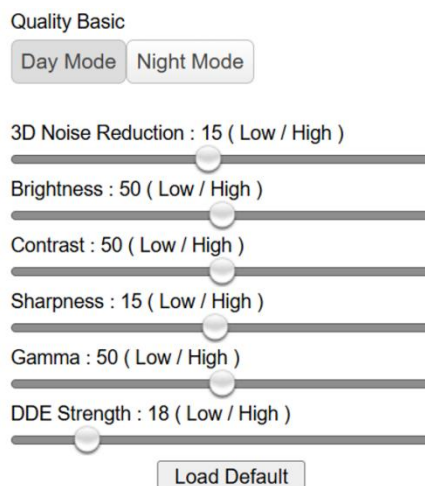

- 3D Noise Reduction: Multi-frame / temporal noise reduction to reduce graininess and jitter noise. **Note:** Setting too high will cause moving people or vehicles to appear blurred or show ghosting/trailing effects.
- Brightness: Brightens/darkens the overall image (global adjustment).
- Contrast: Increases the difference between bright and dark areas, making heat sources and backgrounds more distinct. **Note:** Setting too high will cause easily have “black area, white area”, loss of mid-grayscale detail (flattened tonal range).
- Sharpness: Edge enhancement to make outlines appear clearer. **Note:** Setting too high may amplifies noise.
- Gamma: Adjusts the distribution of bright and dark areas in mid-grayscale (not simply brightening/darkening).
- DDE Strength: Digital Detail Enhancement, enhances local contrast. Makes textures, edges, and local differences more noticeable (e.g., road markings, vehicle outlines). **Note:** Setting too high increases noise.

Note: Operation options may vary depending on the device model.

Note: This function is only supported on models equipped with thermal imaging.

Chapter 4-2-3 Quality Advance

In this page, you have access to Exposure, Automatic Gain Control, White Balance Control, Sense Up, Shutter Speed, and IR-Cut settings allowing you to adjust camera video quality for day and night.

The camera provides two sets of video quality database for day or night mode. This is very useful settings for video quality especially for ANPR/LPR application where the shutter speed can be customized at night. The video quality settings can be applied by Day and Night Switch explained later in this chapter.

Setup > Video > Quality Advance



Day Mode
Night Mode

DeFog
Off

White Balance Control
Auto

Exposure Value
8

WDR
Auto

Shutter Value Range
Min: 1/20000
Max: 1/30

Auto Gain Control(SENSE UP+)
30

Sense Up
Off

Color Mode
Color

Light Setting
Smart Dual Light

Light Duration
10
(10~100)

Sensitivity
5
(1~10)

IR LED
0

White LED
0

IR Cut Filter
On

Load Default

Video setting options are described as follows:

- **DeFog:** When the surrounding area of the subject is foggy and shows low contrast, the defog mode will make the subject appear clearer.
- **White Balance Control:** Adjusts the white balance manually or automatically.
- **Exposure Value:** Adjusts the value of exposure; the higher the value is set, the brighter the video is.
- **WDR:** Enables or disables Wide Dynamic Range to capture greater details.
- **Shutter Value Range:** Set the min and max shutter values.
- **Auto Gain Control (Sense Up+):** See the below description.
- **Sense Up:** Select the level of Sense Up to enhance the video.
- **Color Mode:** Switch between color/black-and-white mode.
- **Light Setting:** Select the lighting execution mode according to the user' s preferences and execute the action with AI. (**Note:** This function only supports models with dual light sources.)
 - **IR Alert Mode:**

When ambient light is sufficient, the camera does not provide supplementary light.

When ambient light is insufficient, the camera activates the IR infrared light, the image switches to black and white mode, and the IR Cut Off.

When the AI is triggered, the camera keeps the IR infrared On, the image remains black and white, the IR Cut Off, and warm light starts flashing.

 - **Light Duration:** Warm light flash execution time.
 - **Warm Light Mode:**

When ambient light is sufficient, the camera does not provide supplementary light.

When ambient light is insufficient, the camera activates the warm light, automatically adjusts brightness according to the on site light conditions, the image switches to color mode, and the IR Cut is On.

When AI is triggered, the camera warm light output is 100%, and IR Cut On.

 - **Light Duration:** The execution time of the camera warm light 100% output.
 - **Sensitivity:** Select the appropriate sensitivity level according to the ambient brightness.
 - Sensitivity 1: Warm light only activates when ambient brightness is extremely low.
 - Sensitivity 10: Warm light activates when ambient brightness is relatively low.
 - **Smart Dual Light:**

When ambient light is sufficient, the camera does not provide supplementary light.

When ambient light is insufficient, the camera activates the IR infrared light, the image switches to black and white mode, and the IR Cut Off.

When AI is triggered, the camera turns off the IR infrared light, activates warm light, and switches the image to color mode with IR Cut On.

 - **Light Duration:** Warm light constant brightness execution time.
- **IR LED:** IR LED control .
- **IR Cut Filter:** Enable/disable the IR cut filter.

Without Sense Up



Sense Up by 3 Frames



Note: Options may differ depending on the model you use.

Chapter 4-2-3-1 Sense Up+

Sense Up+ (AGC) is a low-light and high-sensitivity DSP control that enables outstanding video quality even in low-light environments. Sense Up+ technology can be used for both black-and-white and/or color video modes. To enable Sense Up+, first enable Auto Gain Control (AGC). Use Sense Up+ with 3D noise reduction (3D DNR) can reduce noise that occurs in low light environments. AGC and 3D DNR do not cause motion blur. If the picture is still too dark under the environment, turn on Sense Up (slow shutter) instead, however, it may cause motion blur in low-light conditions.



Chapter 4-2-3-2 White Balance Control (AWB)

There are day time and night time auto white balance controls (ATW) for the camera.

White Balance Control	Manual ▼
One Push AWC	R-Gain 128 ▼ (1~255)
	B-Gain 128 ▼ (1~255)


- **White Balance Control:** Auto white balance and manual white balance
- **R-Gain:** Red gain specific auto white control
- **B-Gain:** Blue gain specific auto white control
- **One Push AWC:** One time AWB setting

Chapter 4-2-3-3 P-Iris Mode

P-Iris of a camera can precisely controls the aperture of the lens getting deeper depth of field (DOF) for city traffic management, school surveillance, and ANPR applications. P-Iris provides excellent video quality than traditional DC-Iris for day-n-night, especially for twilight environment.



The following diagrams demonstrate that P-Iris automatically chooses correct Iris or F value for the best FOV.

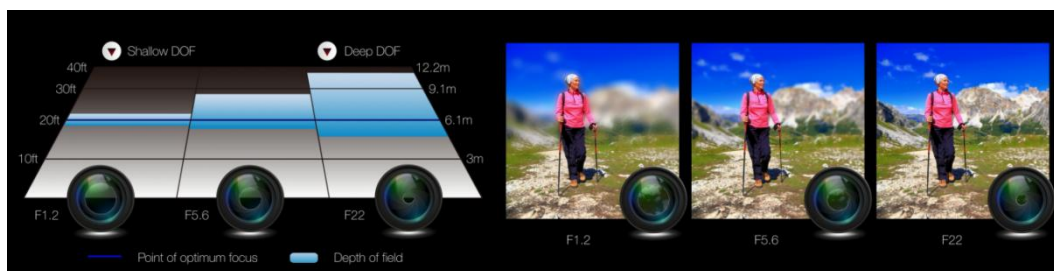

There are two P-Iris modes: Fixed and Auto.

Day Mode
Night Mode

White Balance Control
Auto

Exposure Value
9

P-Iris Mode
Off
Fixed
Auto

P-Iris Wide:0 (FNO:1.60)
P-Iris Close:0 (FNO:1.60)

P-Iris Shutter: 1/30

Shutter Value Range
Min: 1/30
Max: 1/30

Auto Gain Control(SENSE UP+)
30

Sense Up
Off

Color Mode
Color

IR LED
0

White LED
0

IR Cut Filter
On

Load Default

With Fixed P-Iris mode, the Iris (F value) can be specified.

P-Iris Mode
Fixed

P-Iris Wide:0 (FNO:1.60)
P-Iris Close:0 (FNO:1.60)

P-Iris Shutter: 1/30

With Auto P-Iris mode, the Iris is automatically determined.

P-Iris Mode
Auto

P-Iris Wide:0 (FNO:1.60)
P-Iris Close:0 (FNO:1.60)

Note: P-Iris camera only.

Chapter 4-2-3-4 Thermal Imaging Quality Advance

Quality Advance

Day Mode
Night Mode

Color Map
WH

Denoise
Off

Load Default

- Color Map (Color Palette / Pseudocolor): Displays temperature (or grayscale thermal intensity) using different colors, primarily for more intuitive visual identification.
- Denoise: Suppresses noise in thermal images to produce a cleaner image, reducing graininess and flickering.

Note: Operation options may vary depending on the device model.

Note: This function is only supported on models equipped with thermal imaging.

Chapter 4-2-4 Auto Focus

Here you are allowed to change the settings of autofocus functions for autofocus-supported cameras.

Zoom Speed	1 ▼	Zoom in	Zoom out
Focus Speed	2 ▼	Focus Near	Focus Far
		Step Near	Step Far
Quick Zoom	Wide	Tele	
Quick Focus	Auto Focus		
Lens Initialize	Start		

- Zoom Speed: Set the speed for Zoom In and Zoom Out
- Focus Speed: Set the speed for Focus Near and Focus Far
- Quick Zoom: Zoom to the ratio you specified
- Quick Focus: Click to focus automatically
- Lens Initialize: Click to reset zoom speed, focus speed, and zoom ratio to factory defaults

Note: Auto focus camera model only.

Chapter 4-2-5 Day Night Mode Switch

The Day/Night Mode Switch allows you to schedule IR activities by (1) auto, (2) day, (3) night, (4) schedule, or (5) external control. When the setting is set to Auto, the IR module is turned on/off automatically according to the signal from the light sensor. The Night setting removes the IR cut filter, and the Day setting keeps the filter on. If you choose Schedule, the filter turns on/off according to the set time period.

Setup > Video > Day Night Mode Switch

☒ Auto , Switch Delay Time 2 ▼ Sec.

Light sensor current value 100

Day to Night Threshold 6 ▼

Night to Day Threshold 12 ▼

☐ Day Mode

☐ Night Mode

☐ Schedule


OK

- **Auto:** The setting for enabling day-n-night auto IR switch
- **Light sensor current value:** The current environmental lux meter
- **Day to Night Threshold:** The lux threshold for day to night IR switching
- **Night to Day Threshold:** The lux threshold for night to day color mode switching
- **Day Mode:** Force to color mode at day time
- **Night Mode:** Force to IR mode at night time
- **Schedule:** IR scheduling that can be used for enabling IR at certain time.


Note: IR-cut camera model only

Chapter 4-2-6 Privacy Mask

LILIN camera provides up to 4 sets of privacy masking. Select any of the masking numbers and drag to mask specific areas.

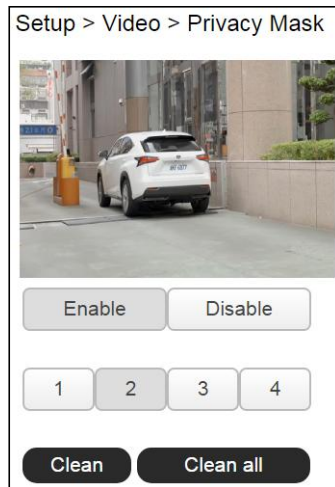


Chapter 4-2-7 Audio Adjust

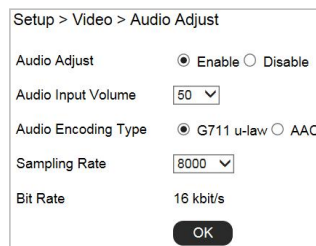

- **Audio Adjust:** The switch for audio adjust
- **Audio Input Volume:** MIC or line-in volume
- **Audio Encoding Type:** volume adjustment
- **Sampling Rate:** set the audio sampling rate
- **Bit Rate:** 16 Kbit/s

Chapter 4-2-8 ROI

LILIN camera supports the Region of Interest (ROI) function. Click Enable ROI to enable the function, and use the arrow buttons to move the view for each preset.

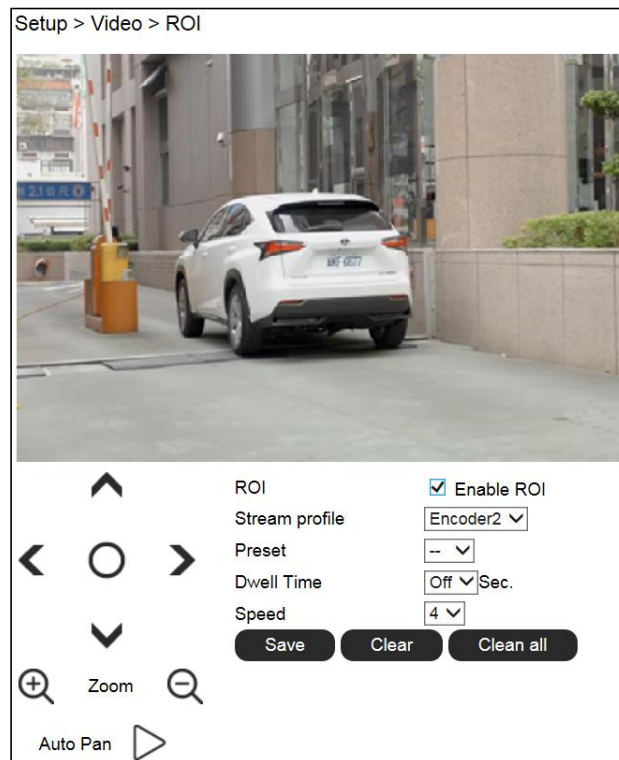

- **Stream profile:** Choose the stream format for the ROI.
- **Preset:** Provides 16 ROI presets to choose from.
- **Dwell Time:** The amount of time the camera stays on the ROI.
- **Speed:** The speed for the camera to move to the ROI.

Click Save for the changes to take effect, or Clear all to clear all the settings

Note: Options may differ depending on the model you use.

Note: By enabling privacy masking, ROI will be turned on automatically, and EPTZ will be disabled.

Note: ROI camera model only.

Chapter 4-2-9 Thermal Imaging Fusion

Fusion Setup

Fusion Mode ☒ On ☐ Off

Fusion Ratio 50% ▾

Fusion Gray Ratio 100% ▾

Load Default

- Fusion Mode: On: Enables fusion display. The image combines the brightness (or color scale) of the thermal image with scene details (e.g. building outlines, lane lines, etc.). Off: Disables fusion.
- Fusion Ratio: Adjusts the blending weight between the thermal image and the visible-light (or detail) image. Higher ratio: Lower thermal image weight → Heat sources such as people/vehicles are more prominent, but background outlines may be less prominent. Lower ratio: Higher thermal image weight.
- Fusion Gray Ratio: Controls the intensity/proportion of the "fused layer detail image (mostly visible light/details)" presented in grayscale in the image. Higher ratio: Larger grayscale proportion. Lower ratio: Smaller grayscale proportion.

Note: Operation options may vary depending on the device model.

Note: This function is only supported on models equipped with thermal imaging.

Chapter 4-3 Controls




Chapter 4-3-1 Digital I/O

The IP camera supports NO and NC control interface. To set up, connect the external alarm digital input to the IP camera. And switch between NO (normally open) and NC (normally closed) for the input.



Chapter 4-3-2 Global Counter

The global counters are for counting a trigger of a remote device. The global counter can be triggered by a metadata, or a virtual input. The global counters can be used for output purposes, such as LED display.

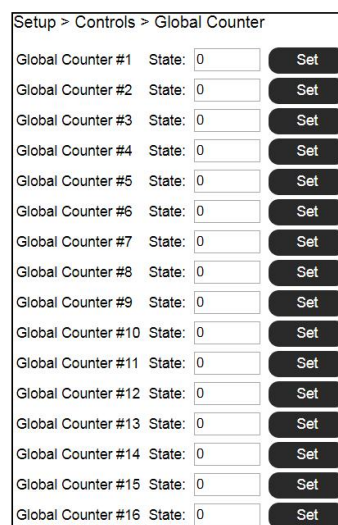



Chapter 4-3-3 Virtual Input

The IP camera provides up to 16 virtual inputs. The virtual inputs are CGI commands that these can be used for other remote device to trigger.

Setup > Controls > Virtual Input

Virtual Input #1	State: ☒ 1
Virtual Input #2	State: ☐ 0
Virtual Input #3	State: ☐ 0
Virtual Input #4	State: ☐ 0
Virtual Input #5	State: ☐ 0
Virtual Input #6	State: ☐ 0
Virtual Input #7	State: ☐ 0
Virtual Input #8	State: ☐ 0
Virtual Input #9	State: ☐ 0
Virtual Input #10	State: ☐ 0
Virtual Input #11	State: ☐ 0
Virtual Input #12	State: ☐ 0
Virtual Input #13	State: ☐ 0
Virtual Input #14	State: ☐ 0
Virtual Input #15	State: ☐ 0
Virtual Input #16	State: ☐ 0

Chapter 4-3-4 Metadata

Metadata is the HTTP response of a CGI command. LILIN IP camera is able to receive the metadata from an IP device. The metadata is the URL response of an IP device.

Setup > Controls > Metadata

Number	1
Metadata Enable	☒
Metadata Server Name	metaservername0
Metadata Type	HTTP Multipart Response ▾
Metadata Server IP/DNS	metaserver.com
Metadata Server Port	80
Account	Account
Password	*****
Metadata URL	/url
Metadata Parser	parser

OK Cancel

The example below, LILIN IP camera is able to receive the metadata of motion events, MotionDetect token of /getalarmmotion CGI command, from an IP device. The events are captured into the valuable %Trigger1% for actions. In the SmartEvent, %Trigger1% can be used for a global counter for event triggering.

To setup metadata, finish the settings below:

Metadata Enable: Enable metadata service.

Metadata Server Name: Specify the name of the metadata service.

Metadata Type: (1) HTTP multipart response, (2) HTTP response

- (1) HTTP multipart response—Continuous responses
- (2) HTTP response—Client-pull by a schedule

Metadata Server IP/DNS: The IP address of an integrated device.

Metadata Server Port: The port number of the integrated device.

Account: Account name of an integrated device.

Password: password of an integrated device.

Metadata URL: The URL of the an integrated device. “/” is required.

Metadata Parser: The parsing tokens for the valuables of Triggers.

Special characters

If there are special characters such as “/”, “\r”, “\n”, and “\r\n” in the metadata, enter special characters for parsing the metadata.

%Split%

%CR% => \r

%LF% => \n

%CRLF% => \r\n

Metadata Enable

☒

Metadata Server Name

Tripwire2

Metadata Type

HTTP Multipart Response ▼

Metadata Server IP/DNS

192.168.0.200

Metadata Server Port

80

Account

admin

Password

Metadata URL

/getalarmmotion

Metadata Parser

hit2=%Trigger3%,

Enter the parsing tokens in the meta parser field for triggering an event from metadata URL of a third party device.
The max length is 127 characters including spaces.

The parsing tokens of Metadata response are described below::

```

%Trigger1% => Metadata #1
%Trigger2% => Metadata #2
%Trigger3% => Metadata #3
%Trigger4% => Metadata #4
%Trigger5% => Metadata #5
%Trigger6% => Metadata #6
%Trigger7% => Metadata #7
%Trigger8% => Metadata #8
%Trigger9% => Metadata #9
%Trigger10% => Metadata #10
%Trigger11% => Metadata #11
%Trigger12% => Metadata #12
%Trigger13% => Metadata #13
%Trigger14% => Metadata #14
%Trigger15% => Metadata #15
%Trigger16% => Metadata #16

%Split%
%CR% => \r
%LF% => \n
%CRLF% => \r\n

```

OK


Cancel

Chapter 4-4 Network

Chapter 4-4-1 General

Network settings are the basic settings that connect LILIN IP cameras to the network. The default IP address of IP cameras is 192.168.0.200. Enter this IP address into your web browser to verify the network connection between a local PC and your IP camera.

To set up a local area network, enter the IP address, subnet mask, gateway, and DNS. Click OK to update the settings.

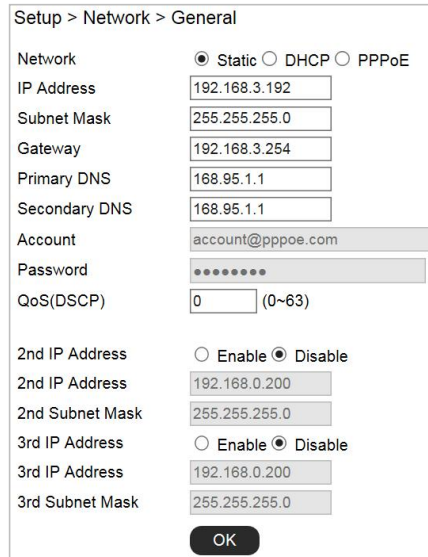

Setup > Network > General

Network ☒ Static ☐ DHCP ☐ PPPoE

IP Address

Subnet Mask

Gateway

Primary DNS

Secondary DNS

Account

Password

QoS(DSCP) (0~63)

2nd IP Address ☐ Enable ☒ Disable

2nd IP Address

2nd Subnet Mask

3rd IP Address ☐ Enable ☒ Disable

3rd IP Address

3rd Subnet Mask

OK

To acquire Internet access, contact your local Internet Service Provider (ISP) for a global IP address. Enter the IP address (global), subnet mask, and gateway IP provided by your ISP.


- **Primary DNS** —The IP address of the default and first DNS server
- **Secondary DNS IP Address**—The IP address of the backup and second DNS server to the default DNS
- **QoS(DSCP)** —Based on DSCP standard, set the TCP/IP packet header for packet priority.

A router, gateway, or other DHCP software server can remotely assign an IP address to your IP camera. There is no need to manually configure the IP address, subnet mask, and gateway. However, every time the DHCP service is rebooted, the IP address of the IP camera may vary. You may need to use IPscan to search for the IP camera. To enable DHCP, click the DHCP option and click Submit.

Note: Once the DHCP option is enabled, the IP camera is assigned an IP address by the DHCP server. This feature is only permitted in LAN environments.

Chapter 4-4-2 HTTP Service

HTTP is a reliable protocol for video streaming. With correct port forwarding, videos can be sent over the Internet. Details are described in the appendix. To change the HTTP port number, consult your network administrator. Choose the streaming type you want to use (HTTP & HTTPS or HTTPS). Click OK for the changes to take effect.

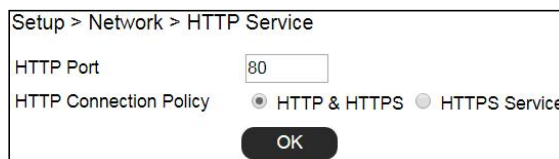

Setup > Network > HTTP Service


HTTP Port

HTTP Connection Policy ☒ HTTP & HTTPS ☐ HTTPS Service

OK

Chapter 4-4-3 RTSP

RTSP is another reliable protocol for video streaming. With correct port forwarding, videos can be sent over the Internet. Details are described in the appendix.

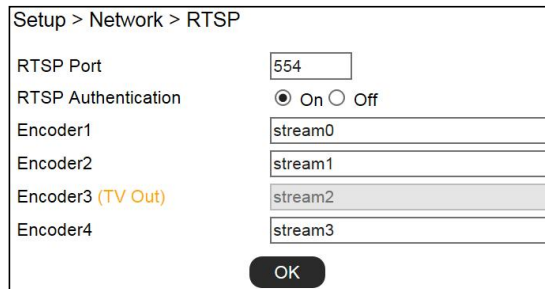

Setup > Network > RTSP

RTSP Port	554
RTSP Authentication	☒ On ☐ Off
Encoder1	stream0
Encoder2	stream1
Encoder3 (TV Out)	stream2
Encoder4	stream3

OK

Settings on this page are described below:

- **RTSP Authentication:** Enabling this option will require username and password when connecting to the RTSP stream
- **Encoder:** Change encoder name.

Chapter 4-4-4 HTTPs Service

LILIN IP camera support HTTPs (Hypertext Secure Transmission Protocol) service. HTTPs is an Internet protocol that ensures the integrity and confidentiality of data as it travels between users' computers and websites. When users visit any website, they want a secure and private online experience.

HTTPs can be regarded as the advanced security version of HTTP. The SSL protocol is added as a security certificate. Therefore, the website can prevent data thief from directly seeing the transmitted data even if they intercept the transmitted information by using the encryption on the agreement.




Setup > Network > HTTPs Service

HTTPs Service ☐ Enable ☒ Disable

There are two options to set HTTPs service:

1. The first option is to create a free self-signed certificate by filling-in the blank field below, then click **Create a certificate.**

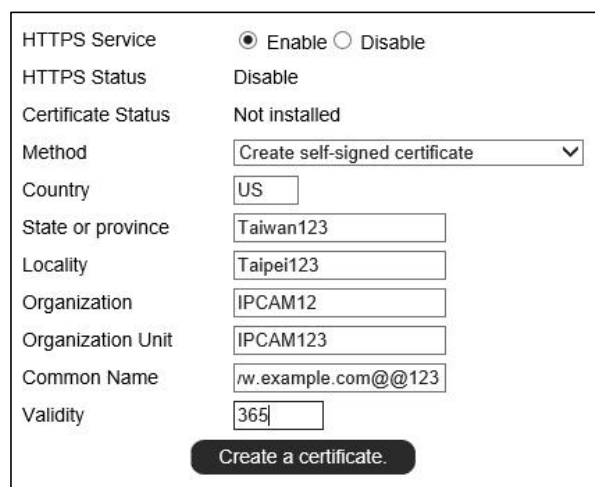

HTTPs Service	☒ Enable ☐ Disable
HTTPs Status	Disable
Certificate Status	Not installed
Method	Create self-signed certificate
Country	US
State or province	Taiwan123
Locality	Taipei123
Organization	IPCAM12
Organization Unit	IPCAM123
Common Name	/w.example.com@@123
Validity	365

Create a certificate.



A pop up message will display:

Organization Unit: IPCAM123
Common Name: www.example.com@@123
Validity: 365
Create a certificate.

Then, you will notice that **Certificate Status** has changed from **Not Installed** to **Active**

HTTPS Service: ☒ Enable ☐ Disable
HTTPS Status: Disable
HTTPS Port: 443
Certificate Status: Active
Method: Create self-signed certificate
Country: US
State or province: Taiwan123
Locality: Taipei123
Organization: IPCAM12
Organization Unit: IPCAM123
Common Name: www.example.com@@123
OK Remove a certificate.

Click **OK** to activate HTTPS function. And the **HTTPS Status** will have changed from **Disable** to **Enable**.

HTTPS Service: ☒ Enable ☐ Disable
HTTPS Status: Disable

→

HTTPS Service: ☒ Enable ☐ Disable
HTTPS Status: Enable


This IP Camera may now be connected via HTTPS protocol with your browser

2. The second option is to purchase an SSL certificate by selecting **Create a certificate request and install**. After purchasing the SSL certificate from a third party company, browse your computer to upload the SSL certificate. If it is successful, the **Certificate Status** will have changed from **Not Installed** to **Active**. And **HTTPS Status** will have changed from **Disable** to **Enable**.

HTTPS Service: ☒ Enable ☐ Disable
HTTPS Status: Disable
Certificate Status: Waiting for a certificate.
Download File: Download
Select a certificate file: Browse... Upload
Method: Create a certificate request and install.
Country: US
State or province: Taiwan123
Locality: Taipei123
Organization: IPCAM12
Organization Unit: IPCAM123
Common Name: www.example.com@@123

Chapter 4-4-5 IP/MAC Address Filtering

LILIN camera provides an IP/MAC address filter to help you block unauthorized IP/MAC addresses from accessing the camera. Enable the service before you enter the IP address you want to block, and press OK.

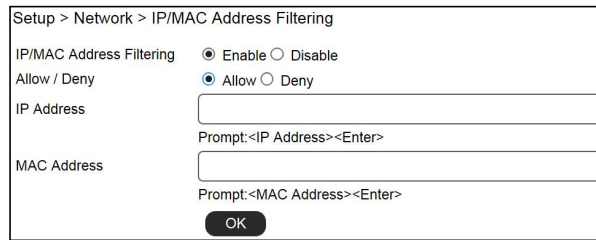

Setup > Network > IP/MAC Address Filtering

IP/MAC Address Filtering ☒ Enable ☐ Disable

Allow / Deny ☒ Allow ☐ Deny

IP Address

Prompt: <IP Address><Enter>

MAC Address


Prompt: <MAC Address><Enter>

OK

- **IP/MAC Address Filtering:** The switch for IP/Mac address filtering.
- **Allow / Deny:** Allow / deny to access by the IP/Mac address.
- **IP Address:** Specify the IP address for filtering.
- **MAC Address:** Specify the IP MAC for filtering.

Chapter 4-4-6 DDNS

The DDNS service allows you to automatically update the DNS server. LILIN provides three DDNS servers to choose from (we recommend you use the first one from the drop-down menu). Click OK for the changes to take effect.

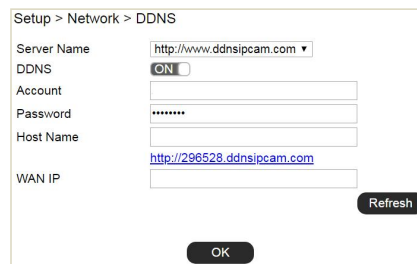

Setup > Network > DDNS

Server Name

DDNS ☒

Account

Password

Host Name

WAN IP

Refresh

OK


To activate DDNS, go to www.ddnsipcam.com. If the IP camera is on Internet with a global IP address, use the last 6 digits of the MAC address as the host name with default account and the default password,. The IP camera will automatically register to www.ddnsipcam.com.

Note: The DDNS feature requires Internet connection.

Chapter 4-4-7 Push Service

The camera provides IOS and Android mobile phone push service. When the camera alarm occurs, push service setting provides the information to LILIN cloud. And then, send push notification to the client's mobile phone.

- **Push Service:** Enable the push notification.
- **Push Time:** The camera reports regularly to the cloud watchdog time interval.
- **ID:** The APP independent code of LILINHome or LILINViewer on the mobile phone. The table list how many mobile phones are currently subscribed to broadcast notification.
- **Address:** The mobile phone registered email account in the cloud.

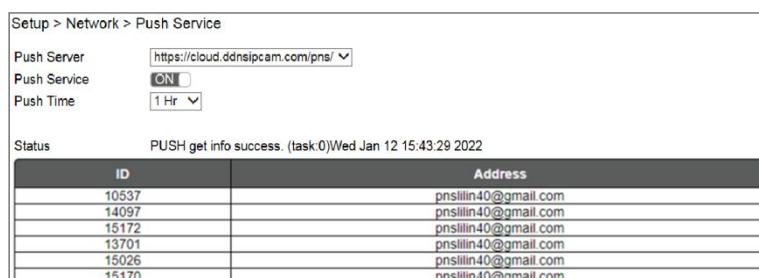

Setup > Network > Push Service

Push Server

Push Service ☒

Push Time

Status PUSH get info success. (task:0)Wed Jan 12 15:43:29 2022

ID	Address
10537	pnsililn40@gmail.com
14097	pnsililn40@gmail.com
15172	pnsililn40@gmail.com
13701	pnsililn40@gmail.com
15026	pnsililn40@gmail.com
15170	pnsililn40@gmail.com

Chapter 4-4-8 LTE

The camera is equipped with 4G LTE mobile network function. After inserting a 4G SIM card into the camera and powering it on, it will automatically connect to the carrier's base station to obtain an IP address. Please enable this service first, then click "OK."

Setup > Network > LTE

LTE ☐ Enable ☒ Disable

LTE Status LTE Disconnected

LTE APN

LTE Dial Number ATD*99#

LTE Pin Code

LTE Puk Code

Username

Password

OK Refresh Signal Strength

Note: LTE model only.

Chapter 4-5-1 SmartEvent

LILIN Live | Language | Logout

System Video Controls Network **SmartEvent** Notification Maintenance LPKG

Here you can configure the detection settings for alarm, global counter, virtual input, meta data and network failure. Choose an event type for entering the event name and event condition for triggering an alarm. Click **Save the event** button for saving the event.

Setup > SmartEvent > SmartEvent

Enable Event 1 ☐

Event Name Aida Event 1

Condition 1 Condition 2 Condition 3 Condition 4 Condition 5

Condition Name Aida Triggering 1

Trigger Schedule Action

Detection Time 1 Sec. Sleep Time 0 Sec.


(Current number/Maximum number of Trigger Rule is 1/3)

Trigger Digital Input


Enable	Trigger	Operator	Value	Duration
☐	Digital Input #1	=	1 or 0	0 Sec.

Save the event. Cancel

Then the page you see allows you to choose the action to take when the chosen events are detected, such as sending JPEG images to an FTP server or an email account. To schedule event monitoring, choose **Schedule** when you edit an event and highlight the time periods you want the camera to detect events. Click **Save the event** button to update the settings.

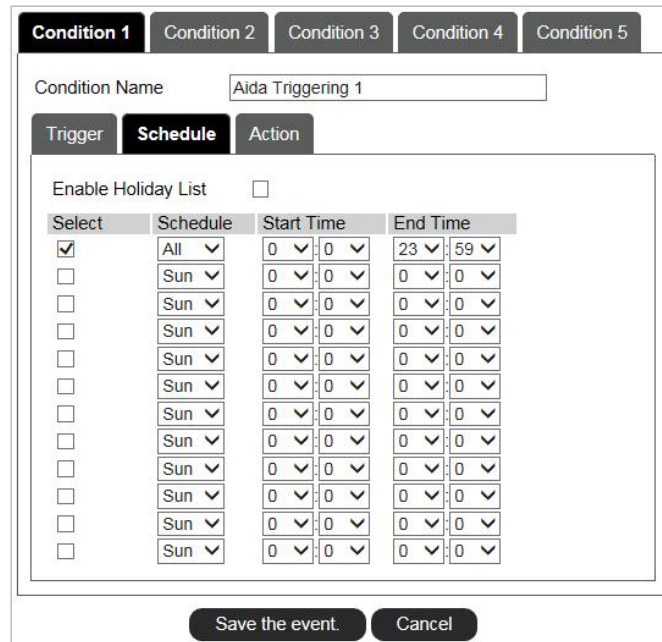

Click **Action** to select the outputs for event triggering.

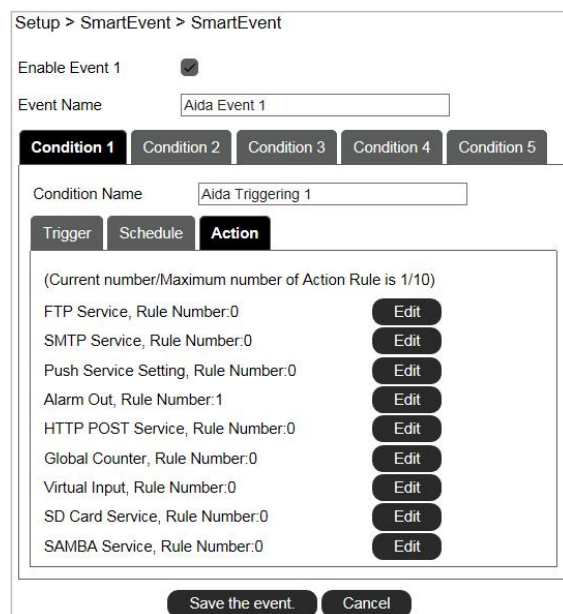


- **FTP Service:** Mail event logs to an FTP server.
- **SMTP Service:** Mail event logs to an SMTP server.
- **Push Service Setting:** When the alarm is triggered, can send push notification to specified iOS and Android.
- **Alarm Out:** Trigger the digital output of the IP camera.
- **HTTP POST Service:** Send notification snapshots to a specified website when alarm is triggered.
- **Global Counter:** To set a value between 0 and 65,535 or add value range from -99 to 99.
- **Virtual Input:** Enable or disable a specific virtual input among the 16 sets.
- **SD Card Service:** When the alarm is triggered, the screenshot is saved to the SD card.
- **Samba Service:** Set to send data of the selected encoder profile to the predefined samba server.

Note: To activate SmartEvent / Action setting, please also configure corresponding action in **Controls** setup page or **Notification** setup page.

Chapter 4-5-2 Motion Detection

The IP camera provides motion detection feature. Click on Motion Detection to determine the areas to monitor. Simply double-click or drag across the areas you want to monitor, and cancel your selection by double-click again or drag across the areas you don't want to monitor with the right mouse button. Click OK button to update the settings.

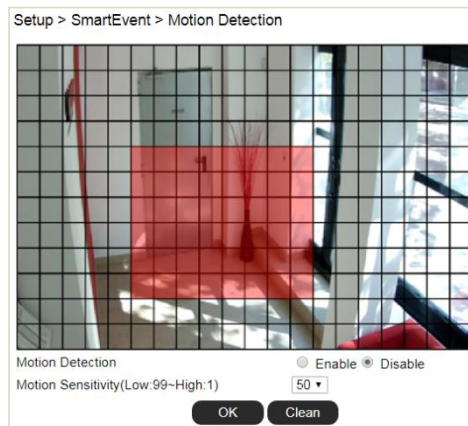

Chapter 4-5-3 Tampering Detection

LILIN camera can send tamper alarms when the focus or view of the camera is changed, or the lens is obstructed by paint or stain. Click Enable to activate this function and configure the settings.




- **Tampering Detection:** The switch for tampering detection
- **Tampering Detection Time:** The time for tampering detection
- **Tampering Detection Dwell:** The output time for tampering detection

Chapter 4-5-4 Audio Detection

When the detected sound exceeds the sensitivity level, the audio detector will trigger an alarm and send a notification.

Setup > SmartEvent > Audio Detection

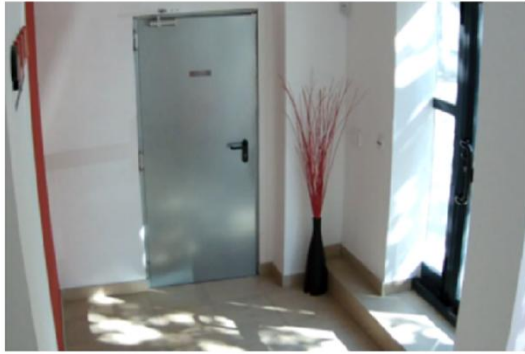

Audio Detection ☐ Enable ☒ Disable

Audio Current Value 0

Audio Detection Trigger Level (Easy:1~Hard:99) 70 ▼

Audio Detection Sensitivity (Low:1~High:99) 50 ▼

OK

- **Audio Detection:** The switch for audio detection
- **Audio Current Value:** The current volume level of live audio. The value will change according to audio volume currently received.
- **Audio Detection Trigger Level:** The triggering level for audio volume
- **Audio Detection Sensitivity:** The sensitivity for audio detection

Note: Audio model only.

Chapter 4-6 Notification



Chapter 4-6-1 FTP Service

Enter the required FTP information to send alarm snapshots to an FTP server.

Setup > Notification > FTP Service

Number	FTP Server Name	FTP/DNS Server	Port
1	FTPServerName	ftp.server.com	21
2	FTP1ServerName	ftp1.server.com	21
3	FTP2ServerName	ftp2.server.com	21

Number 1

FTP Server Name FTPServerName

FTP/DNS Server ftp.server.com

FTP/DNS Server Port 21

Account admin

Password

Directory /alarm_jpeg/

Prefix

Postfix


OK Cancel

- **FTP Channel:** There are three FTP servers that can be configured.
- **Number:** The number of FTP service.

- **FTP Server Name:** The name of the FTP server.
- **FTP/DNS Server:** The FTP server's address.
- **FTP/DNS Server Port:** The FTP server's port number.
- **Account:** The account name to log in to the FTP server.
- **Password:** The password of the account.
- **Directory:** The file path for storing the JPEG snapshots.
- **Prefix:** The prefix of the JPEG filename.
- **Postfix:** The postfix of the JPEG filename.
- **File Format:** The JPEG file format based on different JPEG encoder.

Chapter 4-6-2 SMTP (Email) Service


For alarm notification with JPEG snapshots, enter the required information to enable this Email notification service.

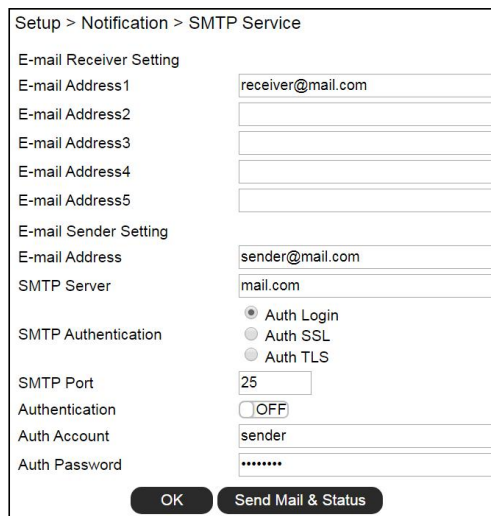

- **Receiver E-mail Address:** Address of receiving mailbox.
- **Sender E-mail Address:** Address of sending mailbox.
- **SMTP Server:** Enter the address of mail server.
- **SMTP Authentication:** Select authentication type
- **SMTP Port:** The default port number is 25 (mail server port).
- **Authentication:** Enable or disable mail service
- **Auth Account:** User name of the mail server
- **Auth Password:** Password of sending mailbox.

Chapter 4-6-3 HTTP POST Service

Through the POST protocol, the camera can automatically send notification snapshots to a website if an alarm is triggered.

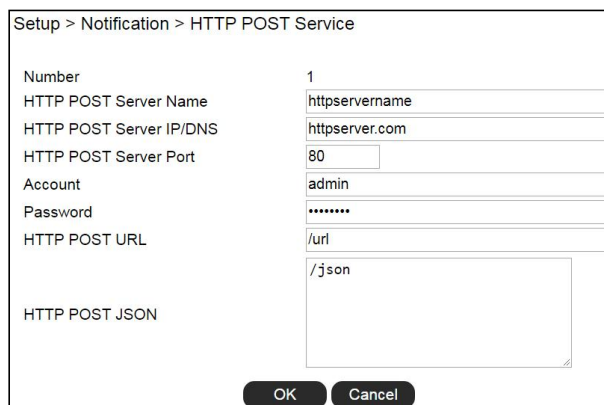

- **HTTP POST Server Name:** The HTTP POST server
- **HTTP POST Server IP/DNS:** The IP/DNS address of the HTTP Post server
- **HTTP POST Server Port:** The port number of the HTTP Post server
- **Account:** The account
- **Password:** The password
- **HTTP POST URL :** The CGI command to send HTTP POST
- **HTTP POST JSON :** The JSON text editor

Chapter 4-6-4 SD Card Service

Ensure a SD card is properly installed to the camera before you enable the SD recording option. The camera will start recording videos when an alarm occurs.

Setup > Notification > SD Card Service

SD Recording	☐ On ☒ Off
SD Recording OSD	☐ On ☒ Off
SD Recording Continuous	☐ On ☒ Off
Recording Format	Encoder1 ▼
Pre Record Time	1 Sec.
SD Card Status	NORMAL
SD Card State	Unmount
SD Card Total Bytes	0 MBytes
SD Card Free Bytes	0 MBytes

OK Unmount Mount Format

Warning: Ensure to click **Unmount** before removing the SD card, or the system may crash.

Note: SD card model only

Chapter 4-6-5 SD Card Backup File

To download a specific clip, right-click the file you want to download and save the AVI file to a local PC.

Setup > Notification > SD Card Backup File

(Right Button->Play, Right Button->Stop)

Delete Refresh

Chapter 4-6-6 Samba Service

The streaming of the camera can be recorded as AVI files to a Samba server. Continuous and pre-alarm recordings are available. To do so, provide required information for Samba service. Circular recording is available for overwriting the oldest recording files if the Samba server gets full.

Setup > Notification > SAMBA Service

SAMBA Recording	☐ On ☒ Off
SAMBA Recording OSD	☐ On ☒ Off
SAMBA Recording Continuous	☐ On ☒ Off
Recording Format	Encoder1 ▼
Pre Record Time	1 Sec.
SAMBA Server IP	192.168.0.100
SAMBA Server Account	admin
SAMBA Server Password	••••••••
SAMBA Server Directory	/Public
SAMBA Status	NORMAL
SAMBA State	SAMBA service is not connected
SAMBA Total Bytes	0 MBytes
SAMBA Free Bytes	0 MBytes

OK Disconnected Connected

- **Samba Recording:** Enable Samba recording service.
- **Samba Recording OSD:** Timestamp OSD on the AVI files
- **Samba Recording Continuous:** Enable/disable Samba continuous recording.
- **Recording Format:** The resolution of the AVI files
- **Pre-record Time:** Pre-alarm recording based on the alarm settings
- **Samba Server IP:** The IP address of the Samba server
- **Samba Server Account:** The account of the Samba server
- **Samba Server Password:** The password of the Samba server
- **Samba Server Directory:** The target path of the recordings on the Samba server
- **Samba Status:** The system status of the Samba server
- **Samba State:** The connection status of the Samba server
- **Samba Total Bytes:** The storage size of the Samba server
- **Samba Free Bytes:** The free storage size of the Samba server

Chapter 4-7 Maintenance



Chapter 4-7-1 Firmware Update

In the Maintenance page, you can click Load Default to restore the camera to factory settings, or click Reboot System to restart the camera. Restoring to factory settings does not affect IP addresses.

To export camera settings, click on Export Config File for other cameras. Click on Import Config File for importing camera settings.

To update the firmware of your IP camera, click Browse and locate the update file. Click Submit to start the firmware update.

Setup > Maintenance > Firmware Update

Please do not turn off power and wait until this web page shows up automatically. Fail to update firmware correctly due to network communication issue may damage this machine and may be required to ship back to your vendor for repair.

flashnt9852x.bin:Application Firmware
 flashnt9852x-s.bin:Encrypted Application Firmware
 pluginnt9852x.bin:plug-in package
 pluginnt9852x-s.bin:plug-in package

Upload 0%

Export Config File

Network Setting ☐
 System Setting ☒
 Controls Setting ☒
 Event Setting ☒
 Services Setting ☒
 Video Setting ☒

Import Config File

Reboot System

Default Settings
☒ Initialize without Network Settings & System Setting
☐ Initialize All Settings

Warning: Never disconnect the power during the update. This could cause irreversible damage to your device.

Note: If you forget your password, please contact your vendor or send the device to us.

Chapter 4-7-2 P2P

The camera features P2P streaming technology. If the SIM card is inserted into the camera and the LTE function is enabled, the camera will automatically connect to the cloud platform. You can then use a mobile app (iOS or Android) for real-time video monitoring and playback.

Setup > Maintenance > P2P

P2P Enable ☐ Enable ☒ Disable

P2P Status

Trans Mode	Device	Mode
1		NONE
2		NONE
3		NONE
4		NONE

Note: LTE model only.

Chapter 4-8 LPKG

Live | Language | Logout

System
Video
Controls
Network
SmartEvent
Notification
Maintenance
LPKG

Please click "Maintenance -> Firmware Update", the Aida plug-in file format of this product is "pluginv22s66.bin", select the "Browse" button to select the file, and select the "Submit" button to install the plug-in.

Live | Language | Log Out

System
Video
Controls
Network
SmartEvent
Notification
Maintenance

Setup > Maintenance > Firmware Update

Firmware Update

LPKG

Please do not turn off power and wait until this web page shows up automatically. Fail to update firmware correctly due to network communication issue may damage this machine and may be required to ship back to your vendor for repair.

flashcv22s66.bin: Application Firmware
pluginv22s66.bin: plug-in package

Upload 0%

Export Config File

Network Setting	☐
System Setting	☒
Controls Setting	☒
Event Setting	☒
Services Setting	☒
Video Setting	☒
Auto Focus Setting	☒

Import Config File

Reboot System


Default Settings

☒ Initialize without Network Settings & System Setting & Auto Focus Setting

☐ Initialize All Settings



After the Aida plug-in gets installed, the Aida plug-in page can see the relevant information of the plug-in as in LILIN Plug-in Package (LPKG) page.

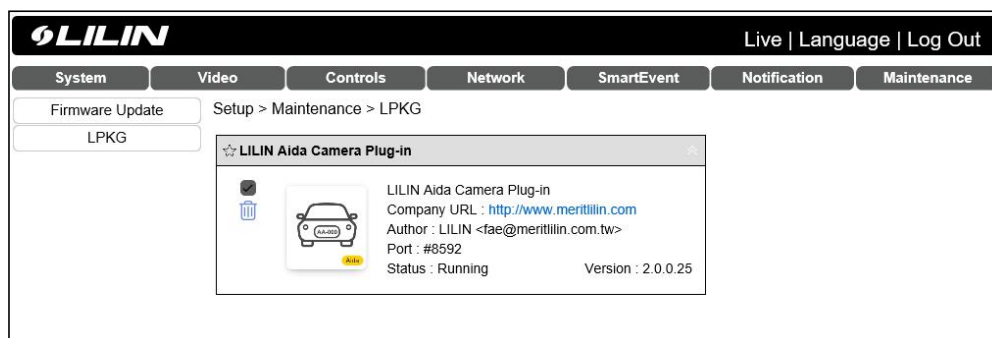

Click on the plug-in icon that can open the plug-in page. LILIN Aida software is at 8592 port. Click ☒ that can enable the plug-in. Click delete button  that can remove the plug-in.




Appendix

DDNS Network Settings


One of the advantages of adopting DDNS and PPPoE services is to save the cost of renting a global IP address. When you power on a camera with a video server and connect to the Internet with the PPPoE service, the camera asks your ISP for a dynamic global IP address. This Internet-accessible IP address will be renewed by the ISP every time you log on the Internet.

Whenever the IP is changed, the camera with the video server will notify the DDNS server of your new IP address. A remote user who intends to connect to the camera with the video server can enter the domain name in the web browser. The domain name will be translated to a new IP address to be used by the camera.

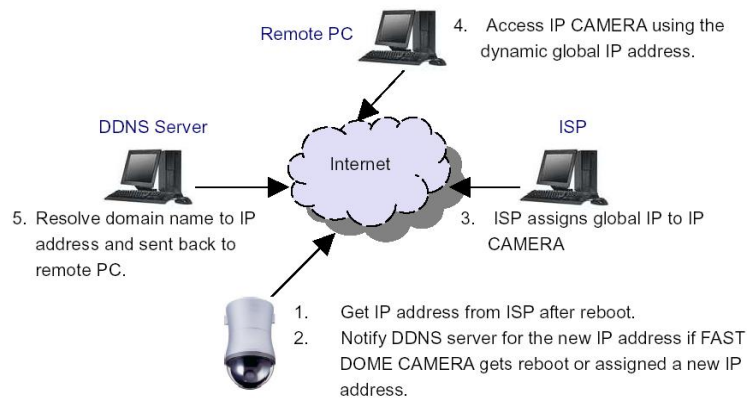

Advanced Port Forwarding Technology

Communication port forwarding technology has been widely used to share a global Internet IP to other devices on the network. The infrastructure of this technology is shown in the below figure, in which the port 80 of the IP router is forwarded to the device with an IP of 192.168.0.10, and the port 81 of the router is forwarded to the device with an IP of 192.168.0.11. When a remote PC on the Internet tries to access the port 81, the user is actually accessing 192.168.0.11, private IP given by the router.

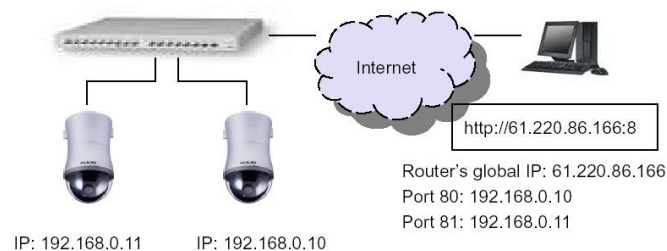

Restore to Factory Default

To restore the IP camera to the factory default, follow the below procedures:

1. Press and hold "Reset Key" for 15 seconds and release.
2. The camera will restart.
3. Launch to IPScan Utility to search for the IP camera.
4. Access the IP camera via an Internet browser.
5. Due to security reason, create the username and password for the first login. To login to the IP camera, please create the username and password on the login page. Press Confirm to complete the setting and login simultaneously.