



Quick User Guide NMS-1000V





















Sections

a)	Overview	3~5
b)	Application	6~7
c)	Before First Login	8~16
d)	Setup Wizard	17~21
e)	Main UI Introduction	22~24
f)	Dashboard Introduction	25~29
g)	Footer Introduction	30~31
h)	System Menu - Domain	32~40
i)	System Menu - AP Control	41~58
j)	System Menu - Refresh	59~60
k)	System Menu - System Configuration	61~68
1)	System Menu - Network Services	69~80
m)	System Menu - Maintenance	81~86
n)	System Menu - Exit	87~89
0)	HDMI Output	90~91
p)	Appendix	92~93



OVERVIEW



Overview

> Main Features:

Dashboard	Providing the at-a-glance view of system, device summary, traffic, PoE network status
Wizard setup	Easy to use step-by-step guidance
Node Discovery	To detect PLANET managed devices available and allow AP grouping to accelerate AP management
Topology Viewer	A topology of network devices compliant with SNMP, ONVIF, Smart Discovery and LLTD Protocol
Event Reports	The status of a network can be reported via network alarm and system log
Alarm System	Popup alerts and email alerts for the administrator via the SMTP server
Batch Provisioning	Enabling multiple APs to be configured and upgraded at one time by using the designated profile
Coverage Heat Map	Real-time signal coverage of APs on the user-defined floor map to optimize Wi-Fi field deployment
Customized Profile	Allowing the creation and maintenance of multiple wireless profiles
Auto Provisioning	Multi-AP provisioning with one click
Cluster Management	Simplifying high-density AP management
Zone Plan	Optimizing AP deployment with actual signal coverage
Authentication	Built-in RADIUS server seamlessly integrated into the enterprise network
User Control	Allowing on-demand account creation and user-defined access policy
Scalability	Free system upgrade and AP firmware bulk upgrade capability
Maximum Scalability	50 floor maps, 1024 nodes, 128 AP groups, 128 SSID profiles, 1024 managed APs, 20,000 clients, 20,000 RADIUS user accounts, 50 RADIUS user groups and 1024 RADIUS clients



Overview

Network Management Characteristics

- Built-in DHCP server
- Built-in RADIUS server
- SSL secure access
- Web-based GUI management interface
- SNMP v1, v2c, and v3 management
- Supports PLANET DDNS/Easy DDNS

> Industrial-grade Physical Hardware

- 2 10/100/1000BASE-T Gigabit Ethernet RJ45 ports
- 2 USB 3.0 ports for configuration backup and restoration
- 1 audio line out (reserve)
- 1 HDMI interface
- 2 DB-9 COM1,COM2 (reserved)
- 1 3-pin DC power input terminal
- 1 2-pin connector for power on/off button (reserve)
- VESA (100 x 100) panel mount

Physical Specifications


Storage	ge 2.5" 32G SATA3 HDD		
Touch LCD Size	NMS-1000V-12: 12.1" TFT-LCD	NMS-1000V-10: 10.1" TFT-LCD	
Touch Type	Resistive Touch Window Projected Capacitive Touch		
Display Resolution	NMS-1000V-12: 1024 x 768	NMS-1000V-10: 1280 x 800	
Display Luminance (cd/m²)	NMS-1000V-12: 500	NMS-1000V-10: 350	
Display Viewing Angle (H°/V°)	NMS-1000V-12: 160(H)/140(V)	NMS-1000V-10: 160(H)/160(V)	
Display Contrast	NMS-1000V-12: 700:1	NMS-1000V-10: 800:1	
Display Backlight Lifetime (hrs.)	NMS-1000V-12: 30,000 hrs.	NMS-1000V-10: 40,000 hrs.	
Light Transmission (%)	Resistive Touch Window: over 80% Projected Capacitive Touch: over 9	•	
Dimensions (W x D x H)	NMS-1000V-12: 319 x 51.7 x 245 mm	NMS-1000V-10: 285 x 49 x 189 mm	
Weight	NMS-1000V-12: 2.9 kg	NMS-1000V-10: 2 kg	
Enclosure	Aluminum Die-casting Chassis		
DC IN 9~36V 60W adapter 12V 5A with terminal block AC 100~240V, 2.0A, 60~50Hz.			




APPLICATIONS



Applications

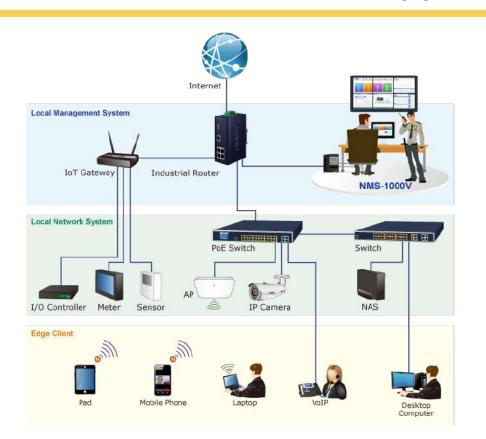

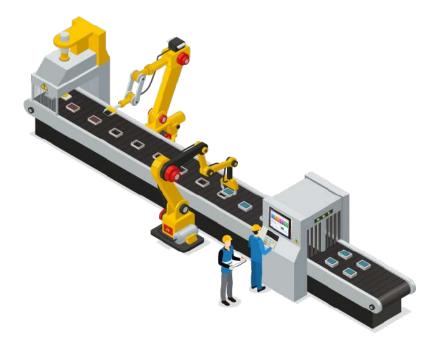



BEFORE FIRST LOGIN



Front & Rear Panels


Front Panel





Front & Rear Panels


Back Panel

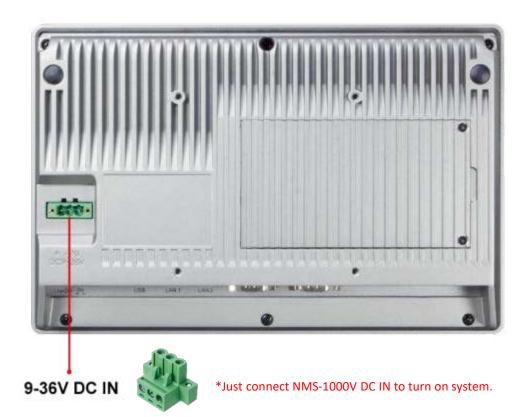



Front & Rear Panels


Bottom Panel

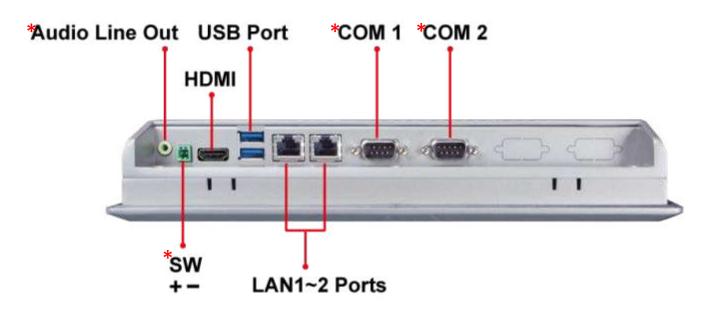

^{*.}Function reserved



Device Setting

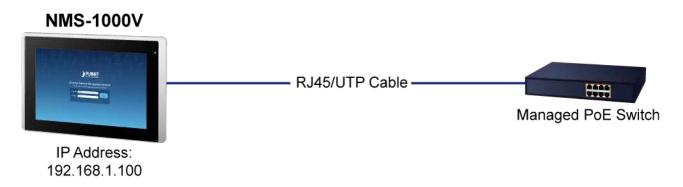


Switch: Log in to the Switch's Web User Interface and refer to the picture below to enable the SNMP and LLDP function as shown in Figures 1 and 2.

AP: Log in to the AP's Web User Interface and refer to Figure 3 below to configure the AP to "Managed AP". Then, click "Apply Change". To support SNMP AP, enable the SNMP function.

IP Cam: The ONVIF function is enabled by default.




Device Setting

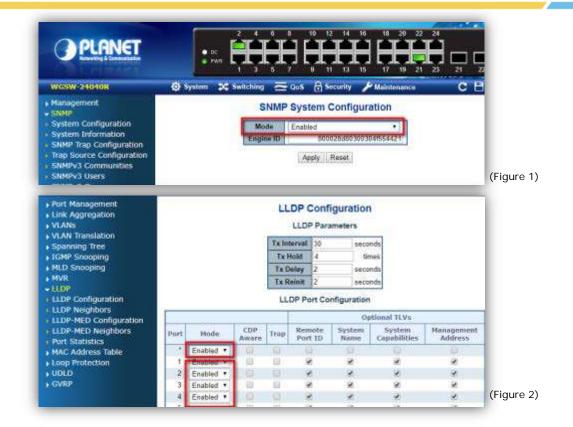



Device Setting

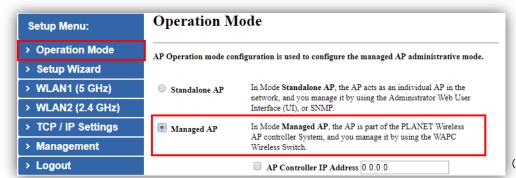

(Figure 3)



Logging in NMS

Username: admin


Password: admin





Remote Logging in NMS

- Open Chrome/Firefox to log in the NMS.(Default IP: https://192.168.1.100:8888)
- Please use Chrome/Firefox to get fully supported. (UI Resolution 1280 x 768)

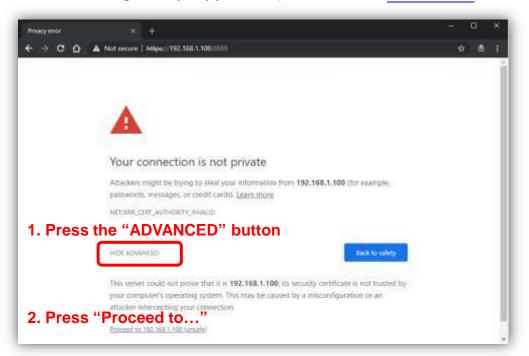




SETUP WIZARD



Account Modification

Steps to modifying account:


- 1. Please key in a new account, except using "admin"
- ◆ 2. New Password must include at least 1*[a~z], 1*[A~Z], 1*[0~9], 1*[~, !, @, ..., w/o "?"] and must contain at least 8 characters.

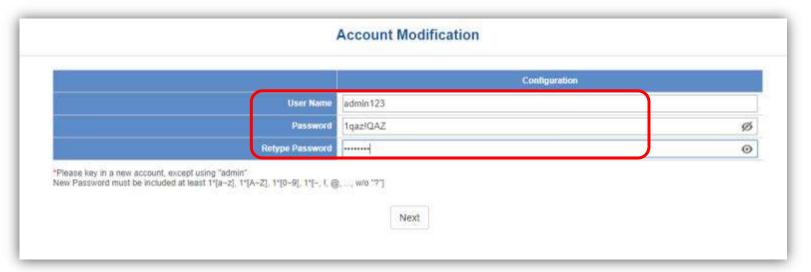



IP Configuration Setting

- ◆ 1. Select "Static IP" or " DHCP Client" for IP configuration setting.
- 2. IP status is shown in real time.
 - *If you want to use the SMTP Alarm function, you must at least enter one DNS server.

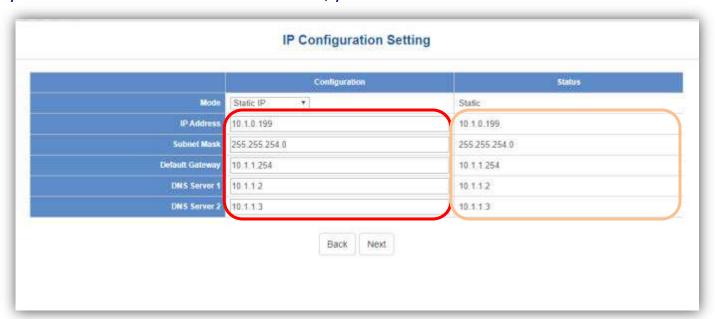



SNMP Preference Setting


- ◆ 1. Select Region for AP Control (ETSI or FCC).
- 2. And enter the RO/RW Community for AP's SNMP.





Devices Discovery

- 1. Press the Search button to discover PLANET devices.
- ◆ 2. Give a check to a box and press the "Add" button to add a device to the NMS system.
- 3. Press the Finish button to leave the Wizard mode and finish the start-up setting.

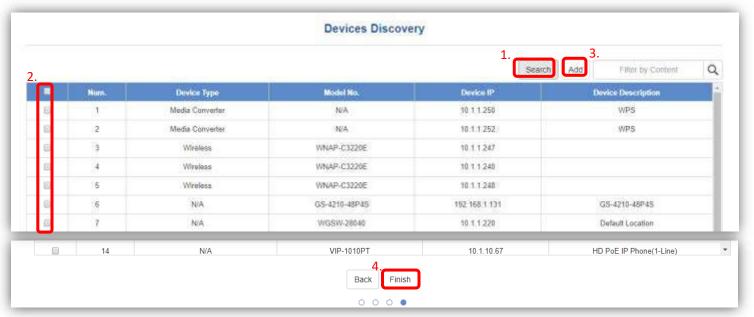



MAIN UI INTRODUCTION



Home Page - Dashboard UI Structure





Main Dashboard - Description

Item	Description	Remarks
А	Device Status Summary	 Roughly shows the system status: Current devices online (total online), clients (total active clients), device groups (total groups) Click the PLANET Logo to connect to PLANET Web site.
В	System Menu	From left to right: Dashboard: Provides the whole system view and wireless network status Domain: Discovery / Device List / Topology View / Event / syslog page Advanced Graph: future feature AP Control: 1. Preference, 2. Profiles, 3. Control, 4. Map It and 5. Statistics Refresh System Configuration: Alert configuration, Date and Time, Interface, IP, Account, Wizard setting Network Services: 1. Planet DDNS, 2. DHCP Server, 3. SMPT, 4. SNMP Agent, and 5. RADIUS Service, Maintenance: System upgrade, backup and restoration, factory default, system setting. Exit: Click to opt for the logout, reboot or shutting down of the system
С	Local Site Information	 Switch status, 2. Router status, 3. Access Point status and 4. Total PoE status, *Click Device type button to filter each type of device via device list.
D	Device Type Summary	Show the real-time total quantity of devices under different types
E	History Graph	Show the history graph of WAN traffic / total PoE usage and budget
F	Popup Alert Message Window	Open to show the system event instantly



DASHBOARD INTRODUCTION



Dashboard - Local Site Information

- Local Site Information: In this area, you can view 1. Switch, 2. Router, 3. Access Point online/off status and 4. Total PoE usage and budget status.
- Click Router ">" button to see the WAN real-time traffic throughput of Mbps, Kbps... . Click Router "<" button to go back to status.





Dashboard (Home)

Click the Device type button to filter each type device via device list.







- Switch: Click the "Switch Button" to filter the type of Switch, Industrial Switch, and Media Converter.
- Router: Click to "Router Button" to filter the type of Router.
- Wireless AP: Click the "Wireless AP Button" filter the type of Wireless (AP).



Dashboard - Device Type Summary

- > Device Type Summary: Show the real-time total quantity of devices under different types.
- > Open the "Zero Filter Button" to filter the 0 quantity of devices type not shown. If this function is closed, you can see all types that NMS can manage.
- > Click the Device type button to filter each type of device via device list.

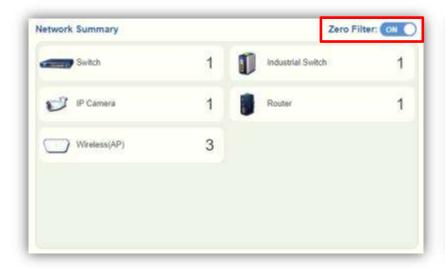

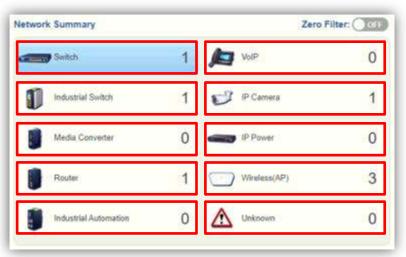



Dashboard - History Graph

- History Graph: Show the history graph of WAN traffic / total PoE usage and budget.
- > Press the "WAN" or "PoE" sheet button to change the type of history graph. Press the "Interval Button" to change the interval for day, week, or month. Then you can see the WAN traffic / total PoE usage and budget.





^{*}Moving finger or mouse cursor on graph can let you see the detailed information.



FOOTER INTRODUCTION



Footer - Popup Alert Message

- Popup Alert Message: Click the "Message" icon (No. 1) to show the last 30 system events in popup window.
- The last event will be shown on the top page; press the "X" icon (No. 2) to close each message.





SYSTEM MENU - DOMAIN



Discovery

◆ Press the "Domain" icon (No. 1), and then press Discovery (No. 2) and Search (No. 3) to find the managed APs and continue other settings.



Support Authorization: If the devices support MQTT protocol, the status will show "Blue Key".

Key	Status
1	Supported
	Not supported
	Managed by the other NMS



Adding Devices to List


Select devices (No. 1) by checking the boxes, and then press the "Apply" icon (No. 2) to add devices to management list.





Device List and Topology View

- Press "Device List" to see the device status.
- Press "Topology View" to see the domain network topology after one minute.
 - ☆ If you do not see the topology, please check devices to enable SNMP and LLDP function.

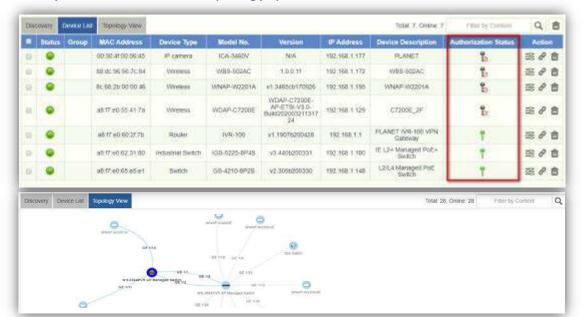


Authorization Status: If the devices support MQTT protocol and are managed currently with NMS, the authorization status will show "Green Key".

Key	Status
7	Managed
D	Not supported
	Managed Fail
1	Managed by the other NMS



Device Identification


Press the "Identification" icon to modify the device description, type, and web protocol information.

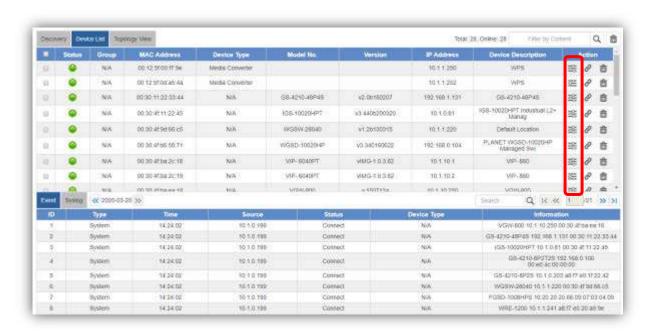



System Event


- Press the "Event" icon (No. 1) to see the full system event by day.
- Press the "<<"& ">>" icon (No. 2) to select daily report.

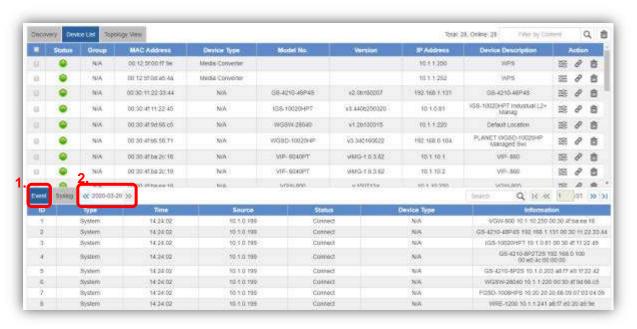



System Event


Use "search" to choose the information you want by entering the key word.

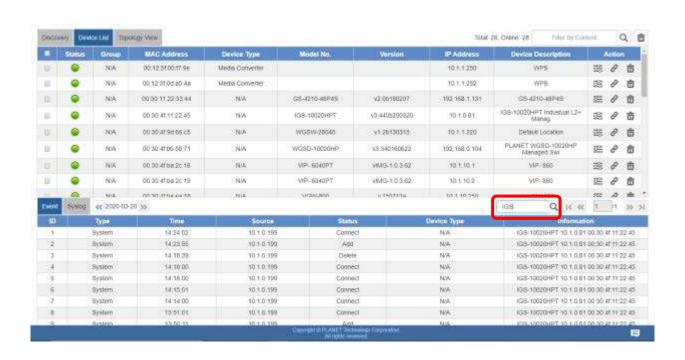



Syslog Server


- ◆ Press the "Syslog" icon (No. 1) to see the full syslog by day (Open the devices remote syslog function.).
- ◆ Press the "<<"& ">>" icon (No. 2) to select daily report.
- Press the "Drop-down" menu (No. 3) to select severity and device ID.

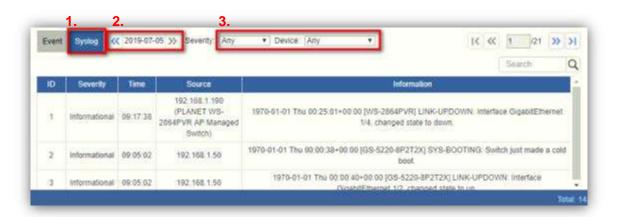



Syslog Server

Use Search to choose the information you want by entering the key word.

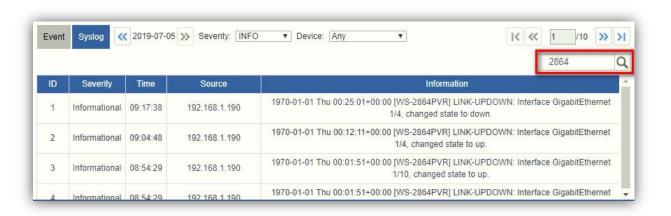



SYSTEM MENU- AP CONTROL




AP Control UI – Structure & Description



Item	Description	Remarks
1	Preference	Edit region, RO community, RW community
2	Profiles	Set up SSID, Radio (2.4G, 5G) Profiles
3	Control	AP and AP group management
4	Map It	Edit the map of AP location and coverage
5	Statistics	Show the statuses of managed APs and active clients



Main Menu - Preference

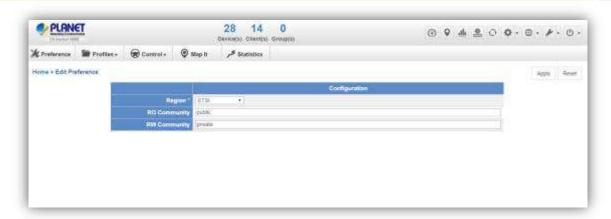


[Preference]

- Preference: On this page, you can choose the device region of FCC or ETSI.
- > Then edit RO community and RW community for public or private use.
- Select Apply or Reset.
- Noted: Device of FCC and device of ETIS cannot be shown at the same time.



Main Menu – Profiles

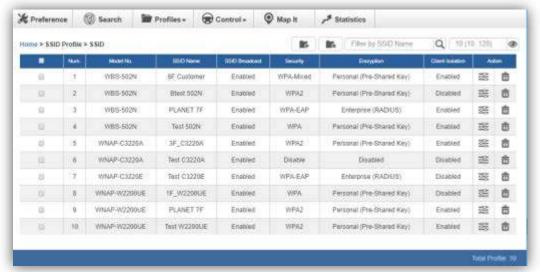


[Profiles]

- Profiles: On this page, you can create the SSID and 2.4GHz/5GHz profiles for further AP provisioning.
- SSID Profiles: Click the "Add new profile" button to add a new SSID profile.
- Radio Profiles: Click the "Add new profile" button to add a new 2.4GHz radio profile or 5GHz radio profile.
- You can create up to 32 profiles for each type of profiles (SSID, 2.4G radio, 5G radio).



Main Menu – Profiles

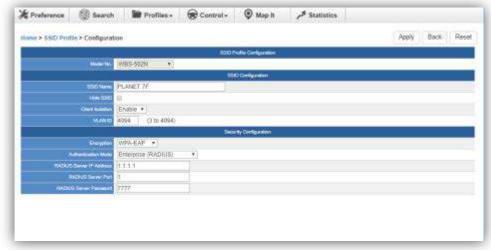

[SSID Profile Configuration]

On the SSID profile configuration page, enter the value that you preferred and then click "Apply" to save the profile.

- Add new profile: Click it to add a new profile.
- Delete selected item: Click it to delete the selected profile.
- 🚉 Edit: Click it to edit the profile.
- m Delete: Click it to delete the single profile.

Filter: You can filter the search result by entering the keywords in the field next to the magnifier icon. The keywords include: SSID Name



Main Menu – 3/Profiles




- On the Radio profile configuration page, enter the value that you preferred and then click "Apply" to save the profile.
- Apply: Click this button to save the settings.
- Back: Click this button to return to the previous page.
- Reset: Click this button to reset all fields to default value.

[2.4GHz Radio Profile Configuration]



Main Menu – 3/Profiles

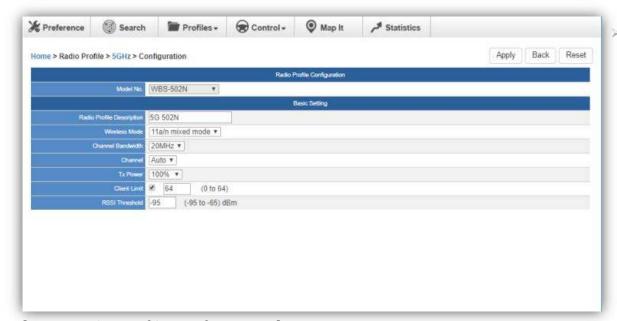


[5GHz Radio Profile Configuration]

Remarks:

- 1. Strongly suggest you to keep the values as default except the fields like Channel, Network Mode, Channel Bandwidth, Tx Power, IAPP, and Tx/Rx to prevent any unexpected error or impact on the performance.
- 2. WMM Capable is not allowed to be disabled.



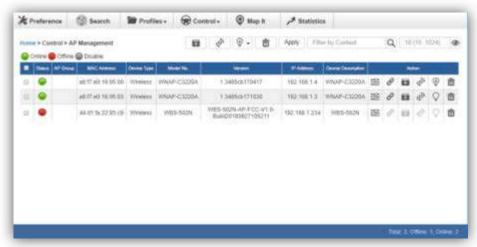


[Control - AP Management]

- Control: On this page, the system allows you to control the AP or AP group with specific actions.
- AP Management: Go to this page to control single AP or multiple APs.
- AP Group Management: Go to this page to create multiple APs as a group or control AP group.
- Filter: You can filter the AP list by entering the keyword in the field next to the magnifier icon. The keyword should be in any context that belongs to the fields like AP Group, MAC Address, Model, Version, IP Address, and Name.
- Apply: Click this button to apply the setting. The profile setting will not take effect until you click the "Apply" button on the Control's main page.



> Status:



In progress: action in progress

✓ Finished/Successful: action finished and successful.

X Failed: action failed.

> Action:

Setting: edit setting and allocate profile to AP

Link: link to the AP's web page

Firmware Update: Upgrade AP's firmware

Reboot: Reboot the AP

Delete: Delete the AP from the control list

Mouse-click in a sequential order:


LED blink-> LED off-> LED on

> Remarks:

To configure multiple APs at one time, select multiple APs and then choose one of the action icons on the top of the page.

The "Link" action is not allowed for multiple APs.



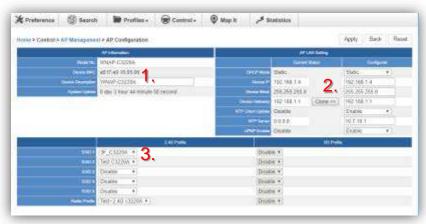


Procedure of configuring AP's setting:

- 1. Edit the basic AP Information.
- 2. Click the "Clone >>" button if you want to use the same IP configuration as the previous LAN settings. Otherwise, please enter the preferred LAN setting.
- 3. If there are already profiles created, you can designate the SSID profile and Radio profile to this AP. You can do this step later once AP's basic setting is done

[AP Configuration]

- > On the AP Group Configuration page, you can create an AP group with the same model of AP.
- > Save: Click this button to save the group/setting.
- > Back: Click this button to return to the previous page.
- Reset: Click this button to reset all fields to default value.
- Remarks: The system allows to create up to 32 AP groups.



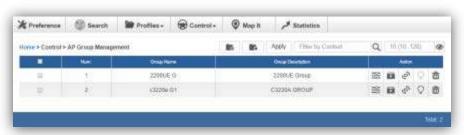

[3/Control - AP Group Management]


- > On the AP Group Management page, you can create AP group and control one or more AP groups.
- Add new group: Click it to add an AP group.
- Delete selected item: Click it to delete the selected AP group.
- Apply: Click this button to apply the setting. The profile setting will not take effect to a group until you click the "Apply" button.

> Remarks:

To do profile provisioning to multiple AP groups at one time, select multiple AP groups, and then click the "Apply" button.

The "Link" action is not allowed for multiple APs or AP group.



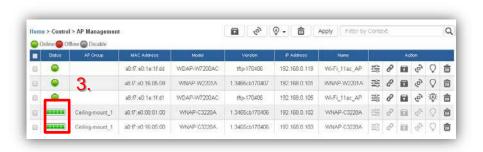

- Procedure of profile provisioning to AP groups:
 - 1. Select the AP group.
 - 2. Click the "Apply" button.
 - 3. Go to "3/Control-> AP Management" to check whether the status is becoming "In progress". Wait until the status comes "Online".


> Action:

- setting: Edit setting and allocate profile to group
- Firmware Update: Upgrade AP group's firmware
- Reboot: Reboot the AP group
- Delete: Delete the AP group from the control list
- LED Control: Control the AP group's LED.

Mouse-click in a sequential order:

LED blink-> LED off-> LED on



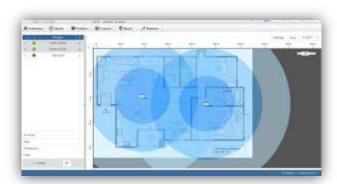


[Map It]

- Map It: On this page, the system allows you to upload your floor map to the system and you can add managed APs to the actual position against the floor map. This is convenient to user to view and adjust the actual deployment by reference to its real transmission power and channel allocation.
- > The system allows user to upload up to 10 floor maps.

> A system message will prompt to remind you to edit map first if there is no other map available in the system. Click "OK" to continue.




> On the Edit Map page, click "Choose File" and enter the map's description. Then click "Apply" to upload the map.

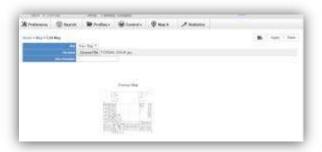

^{*}Please use mouse to use this function.




> After finishing map uploading, you can click the sidebar at the left-side of the window to expand the AP list.

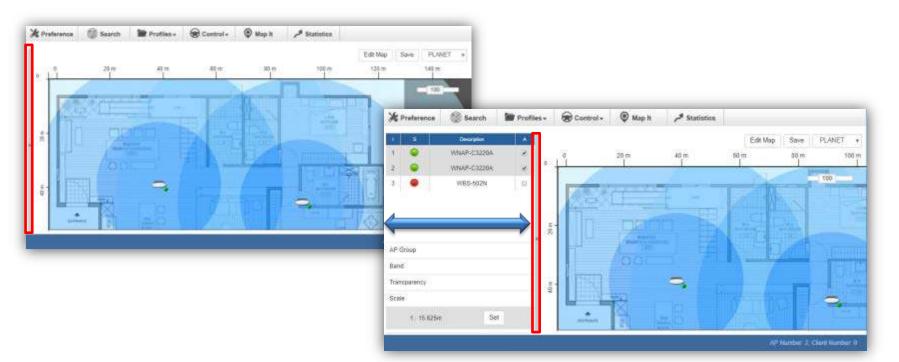




> Setting Scale: 1. Click "Scale" to start to reset the map scale.

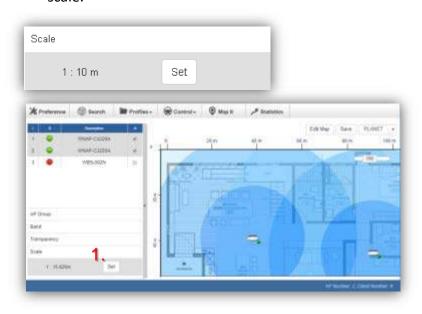


> Press the "Set" button to draw a line on the map. Fill its physical distance in the blank and press "Set" or "Cancel". For example, in the graph below, set the door width to 0.8 m.

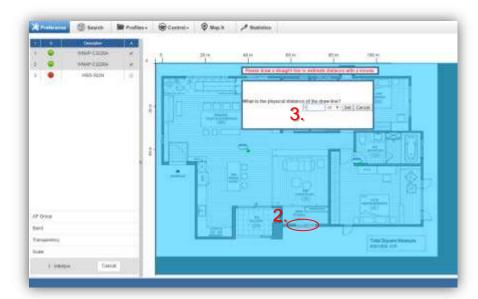




> Drag and drop the AP onto the map or select multiple APs by clicking the checkbox.

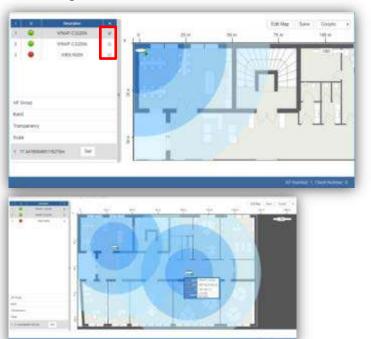


> Once the allocation is done, click "Save" to save the setting.

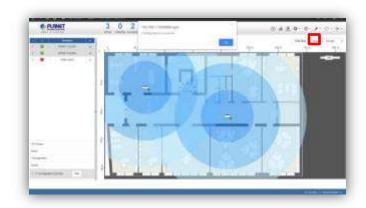

> To upload more maps or edit current map, click the "Edit Map" button to re-enter the Edit Map page.



- > The lower-left side area provides map control options.
- > AP Group: To filter the managed APs shown on the map, the selected AP group is displayed.



➤ Band: Select "2.4GHz" to show APs with 2.4GHz frequency or select "5GHz" to show APs with 5GHz frequency.




> Transparency: Slide the bar to adjust the transparency of the map.






Main Menu – Statistics

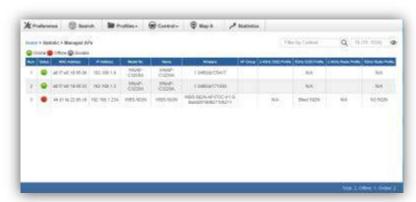

[Statistics – Managed APs]

- Managed APs: On this page, you can observe the current configuration of all managed APs.
- > Filter: You can filter the AP list by entering the keyword in the field next to the magnifier icon. The keyword should be in any context that belongs to the fields of this page.

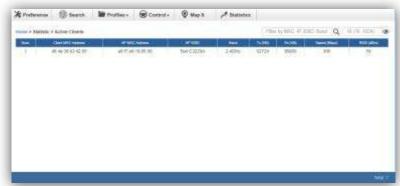

[Statistics – Active Clients]


- Active Clients: On this page, you can observe the statuses of all associated clients including traffic statistics, transmission speed and RSSI signal strength.
- > Filter: You can filter the search result by entering the keywords in the field next to the magnifier icon. The keywords include MAC Address, IP Address, SSID and Band.



SYSTEM MENU – REFRESH



System Menu – Refresh




[System Menu – Refresh]

Refresh: The page content will be updated every 1 minute automatically by default. If you require the system to update immediately, you may click "Manually" to refresh the page content.



SYSTEM MENU - SYSTEM CONFIGURATION



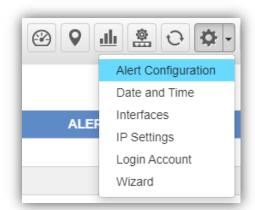


[System Menu – System Configuration]

- Alert Configuration: On this page, you can configure the system event notice enable or disable by Popup Alert Message and SMTP function.
- > After configuration is done, click "Apply" to apply the setting.




[Alert Configuration]



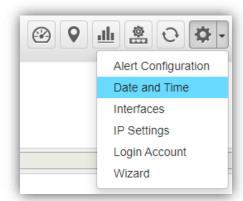

[System Menu – System Configuration]

- Date and Time: On this page, you can configure the Date and Time by NTP server or manual setting.
- After configuration is done, click "Apply" to apply the setting.

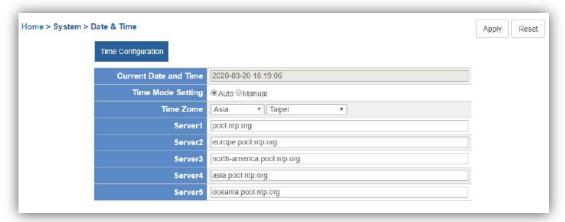

[Date and Time configuration]





- Interface: On the PORT page, you can see each Port status and you can configure the speed for down, auto, 10/100 Mbps HDX/FDX, and 1GMbps FDX on the Port Statistics page.
- Click "Apply" to apply the setting.

[System Menu – System Configuration]




[Port Settings]






[Port Statistics information]



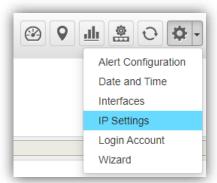


- > IP Settings: On this page, you can configure the static ID of SAPC or choose it as DHCP client.
- After configuration is done, click "Apply" to apply the setting. The window will prompt you to change network setting that will cause the system to restart.

[System Menu – System Configuration]

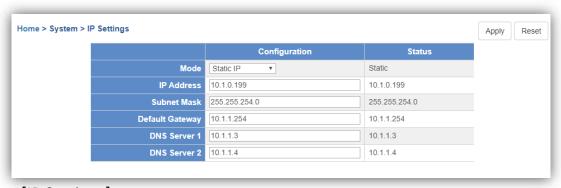

[IP Settings] 66



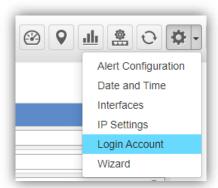

- **Login Account:** On this page, you can modify the login user name and password.
- Enter the new user name and new password directly in the corresponding fields, and then click "Apply" to apply the setting. The login window will be prompted to ask you to enter the new account to re-log in the system.


[System Menu – System Configuration]



[Login Account]

- *Please key in a new account, except using "admin"
- New Password must include at least 1*[a~z], 1*[A~Z], 1*[0~9],
 1*[~,!,@,...] and must contain at least 8 characters.



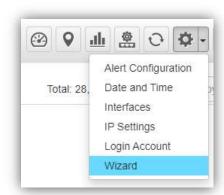

[System Menu – System Configuration]


Wizard: Select Wizard for setup wizard again.



SYSTEM MENU - NETWORK SERVICES




System Menu – Network Services

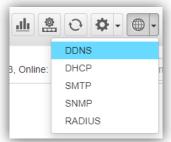

[System Menu – DDNS]


- Network Services: On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- DDNS: Click "DDNS" to use PLANET Easy DDNS services or Dynamic DDNS. (Supports PLANET DDNS/Easy DDNS)
- Click "Apply" to apply the setting.

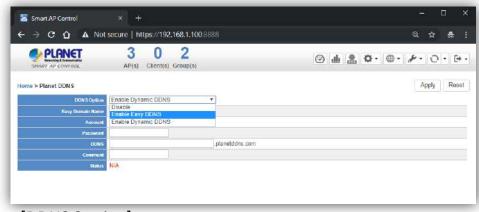


[DDNS Setting]



System Menu – Network Services

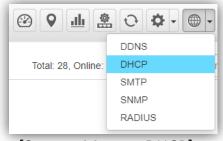

[System Menu – DHCP]

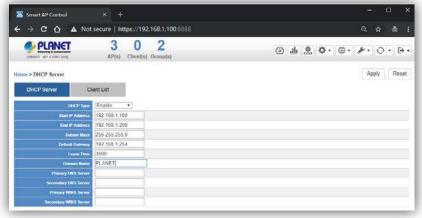

- Network Services: On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- DHCP: On the DHCP Server page, choose "Enable" to use DHCP server service. On Client list page, you can see the Client detailed information.
- Click "Apply" to apply the setting.

[DHCP Setting]




System Menu – Network Services




[Client List Information]



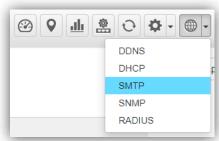

[System Menu – SMTP]

- Network Services: On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- > SMTP: On the SMTP page, choose "Enable" to use SMTP service.
- Click "Apply" to apply the setting.

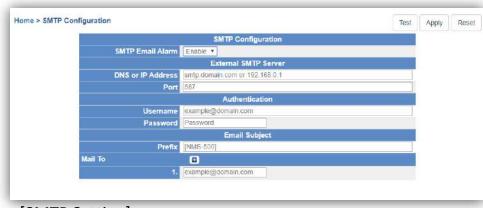


[SMTP Setting]







[System Menu – SNMP]

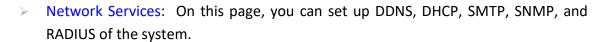


- > SNMP: On the SNMP Agent page, choose "Enable" to use SNMP v1, v2c, v3 service.
 On the SNMP Trap page, you can set up the SNMP Trap Configuration.
- Click "Apply" to apply the setting.

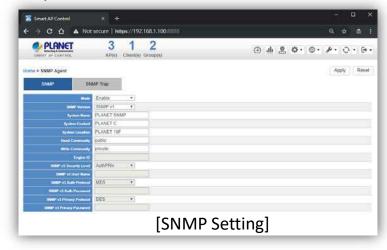



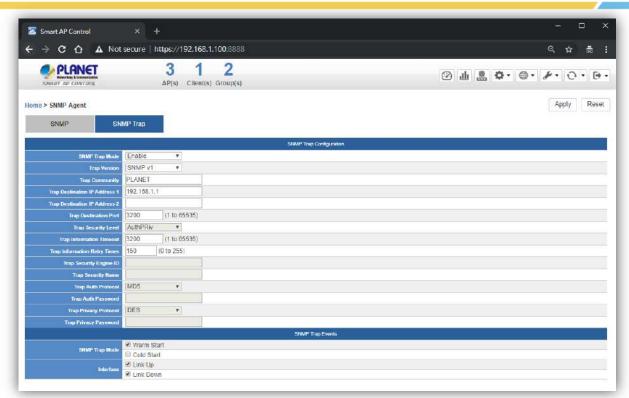




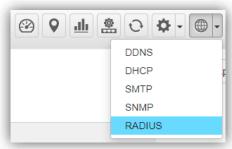

[System Menu - RADIUS]

- Network Services: On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- RADIUS: On the RADIUS page, choose "Enable" to use RADIUS service. On RADIUS Client page and RADIUS User Account page, you can see the detailed information of them.
- Click "Apply" to apply the setting.

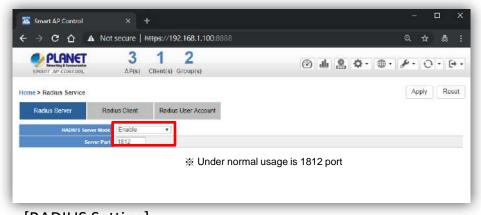


[RADIUS Setting] 76






[System Menu – RADIUS Client]

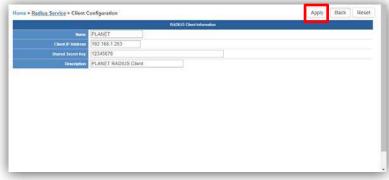

- Add Radius Client Configuration: On this page, you can set up Name, Client IP, Shared Secret Key, and Description of the system.
- Click "Apply" to apply the setting.
- AP RADIUS Setup: You should go to AP's Web UI to RADIUS page to set up Radius Server IP, Password and Server Port (1812), and enable the function.

[RADIUS Client Setting]



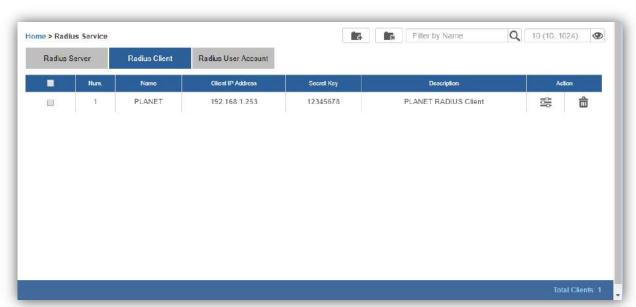


[RADIUS Client Setting Finished]






[System Menu – RADIUS]

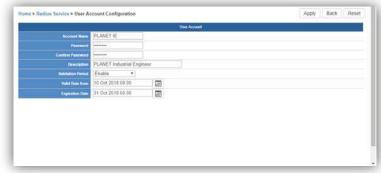

[RADIUS User Account Setting]

- Add RADIUS User Account: On this page, you can set up Account Name, Password, Description, and Validation Period information of the system.
- Click "Apply" to apply the setting.



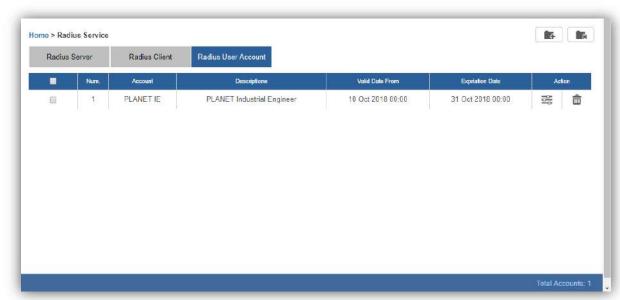

[RADIUS User Account Setting Finished]



SYSTEM MENU - MAINTENANCE





[System Menu – Maintenance]



[System Upgrade]

- > System Upgrade: On this page, you can upgrade the system to the latest version with new patch.
- Click "Choose File" to designate the system patch file for upgrade. Then, click the upgrade icon at the upper-right corner to start the system upgrade.
- > Please regularly check PLANET official website for the system upgrade file.

^{*}Remote login must be used for the NMS-1000V to do firmware upgrade.





[System Menu – Maintenance]




[Backup]




- Backup/Restore: On this page, you can back up and restore the system profiles with the system file (*.tar.gz.enc).
- Click "backup" to start backing up the system profiles file in HDD or USB.
- Use the "Choose File" button to choose the right system profiles file and click "restore" to start restoring the system.
- Please use the system default file name to restore system, or it may fail.

[Restore]



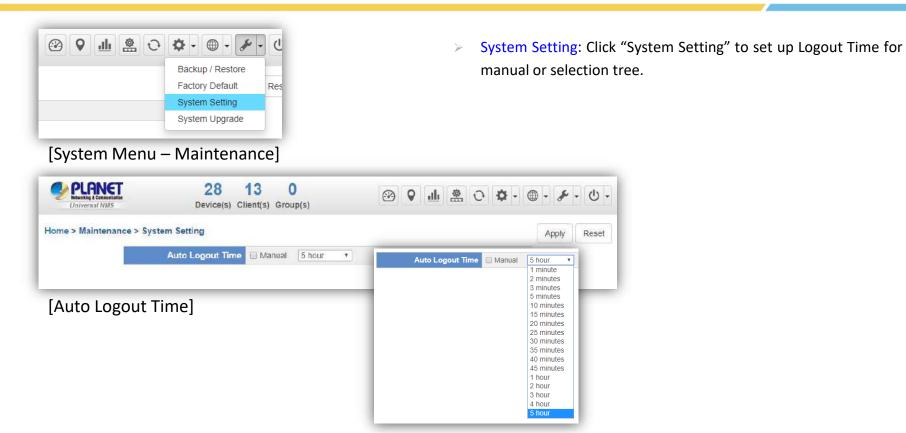



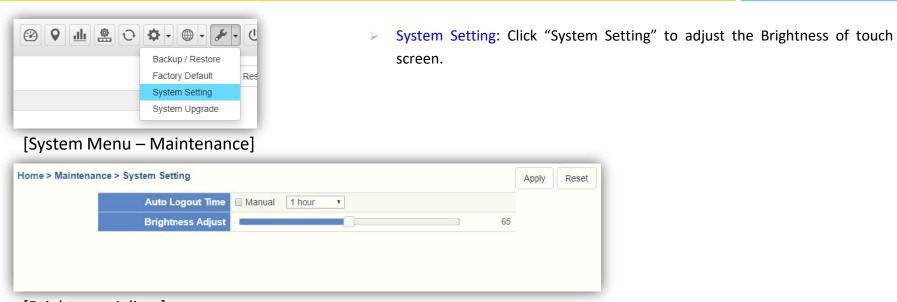


[Brightness Adjust]





[System Menu – Factory Default]

Factory Default: Click "Factory Default" to reset the system to factory default. Once clicked, the warning window will prompt you to reset system to default.

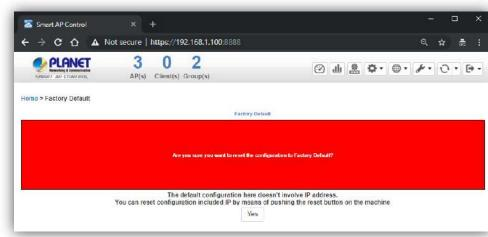


[Factory Default Warning]



SYSTEM MENU - EXIT



System Menu – Exit



[System Menu – Logout]



[Login Window]

- **Exit:** On this page, you can log out, reboot, or shut down the system.
- Logout: Click "Logout" to log out the system.
- Once clicked, the login window will prompt you to re-log in the system.




System Menu – Exit



[System Menu – Reboot]

- **Logout:** On this page, you can log out, reboot, or shut down the system.
- > Reboot: Click "Reboot" to restart the system.
- > Shutdown: Click "Shutdown" to close the system and shut down the MV.
- Once clicked, the warning window will prompt you to reboot or shut down the system.

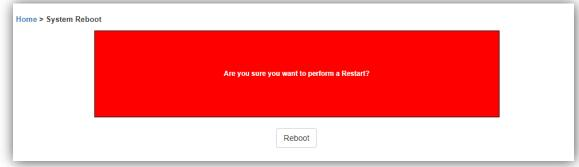

[Reboot Warning]



HDMI OUTPUT



HDMI Output

- **HDMI Output:** NMS-1000V-12 and NMS-1000V-10 support HDMI Output function.
- * Please follow the steps below to make sure this function works correctly.
- 1 · Open NMS-1000 to log in page.
- 2 · Make sure the TV or Screen supports resolutions of 1024 x 768 for best optimization.
- 3 · Connect NMS-1000V and TV or Screen with HDMI cable.





APPENDIX



Appendix – MQTT Devices Support List

Item	Switch	The Latest Firmware version	Industrial Switch	The Latest Firmware version
1	GS-4210-8P2S	<u>GS-4210-8P2S_v2.305b200330.bix</u>	IGS-10020HPT	IGS10020HPT_V3_v3.440b200331.mfi
2	GS-4210-8P2T2S	GS-4210-8P2T2S_v2.305b200330.bix	IGS-10020PT	IGS10020PT_V3_v3.440b200331.mfi
3	GS-4210-48T4S	GS-4210-48T4S_v2.305b200330.bix	IGS-12040MT	IGS12040MT_v2.440b200331.mfi
4	GS-4210-48P4S	GS-4210-48P4S_v2.305b200330.bix	IGS-20160HPT	IGS20160HPT_v2.440b200331.mfi
5	GS-4210-24T2S	GS-4210-24T2S v2.305b200330.bix	IGS-20040MT	IGS20040MT v2.440b200331.mfi
6	GS-4210-16T2S	GS-4210-16T2S v2.305b200330.bix	IGS-10020MT	IGS10020MT_v3.440b200331.mfi
7	GS-4210-24P(L)4C	GS-4210-24P4C_v2.305b200330.bix	IGS-5225-8P4S	IGS52258P4S_v3.440b200331.mfi
8	GS-4210-24P2S	GS-4210-24P2S_v3.305b200331.bix	IGS-5225-8P2T2S	IGS52258P2T2S_v2.440b200331.mfi
9	GS-4210-16P4C	GS-4210-16P4C v2.305b200331.bix	IGS-5225-4UP1T2S	IGS52254UP1T2S v4.440b200331.mfi
10	GS-4210-16P2S	GS-4210-16P2S v2.305b200331.bix	IGS-5225-4P2S	IGS52254P2S v1.440b200331.mfi
11			IGS-5225-4T2S	IGS52254T2S v2.440b200331.mfi
Item	Router	The Latest Firmware version	Industrial Router	The Latest Firmware version
1	VR-100	VR-100 v1.1907b200326.bin	IVR-100	IVR-100_v1.1907b200326.bin
Item	NMS	The Latest Firmware version	Industrial NMS	The Latest Firmware version
1	NMS-500	NMS-500_v1.0b200514	NMS-1000V-12	NMS-1000V-12 v1.0b200514
2			NMS-1000V-10	NMS-1000V-10_v1.0b200514



Appendix – Wireless (AP) Support List

Item	Wireless AP	The Latest Firmware version
1	WDAP-W7200AC	V1.3465cb171030
2	WDAP-C7200AC	V1.3465cb171030
3	WNAP-C3220A	<u>V1.3465cb171030</u>
4	WNAP-W2201A	<u>V1.3465cb171030</u>
5	WDAP-W705E	WDAP-W750E-AP-V3.0*feature in future
6	WNAP-W2200UE	WNAP-W2200UE-AP-V1.0
7	WDAP-C7200E	WDAP-C7200E-AP-V1.0
8	WNAP-C3220E	WNAP-C3220E-AP-V1.0
9	WBS-202N	WBS-202N-AP-V1.0
10	WDAP-702AC	WDAP-702AC-V1.0
11	WBS-502AC	WBS-502N-AP-V1.0
12	WAP-252N	WAP-252N-AP-V1.0
13	WBS-502N	WBS-502N-AP-V1.0
14	WDAP-802AC	WDAP-802AC-AP-V1.0
15	WAP-552N	WAP-552N-AP-V1.0
16	WBS-200N	WBS-200N-V1.0
17	WAP-200N	WAP-200N-V1.0
18	WAP-500N	WAP-500N-V1.0
19	WDAP-512AC	WDAP-512AC-AP-V3.0*feature in future





THANK YOU